

1971 AMC AMBASSADOR

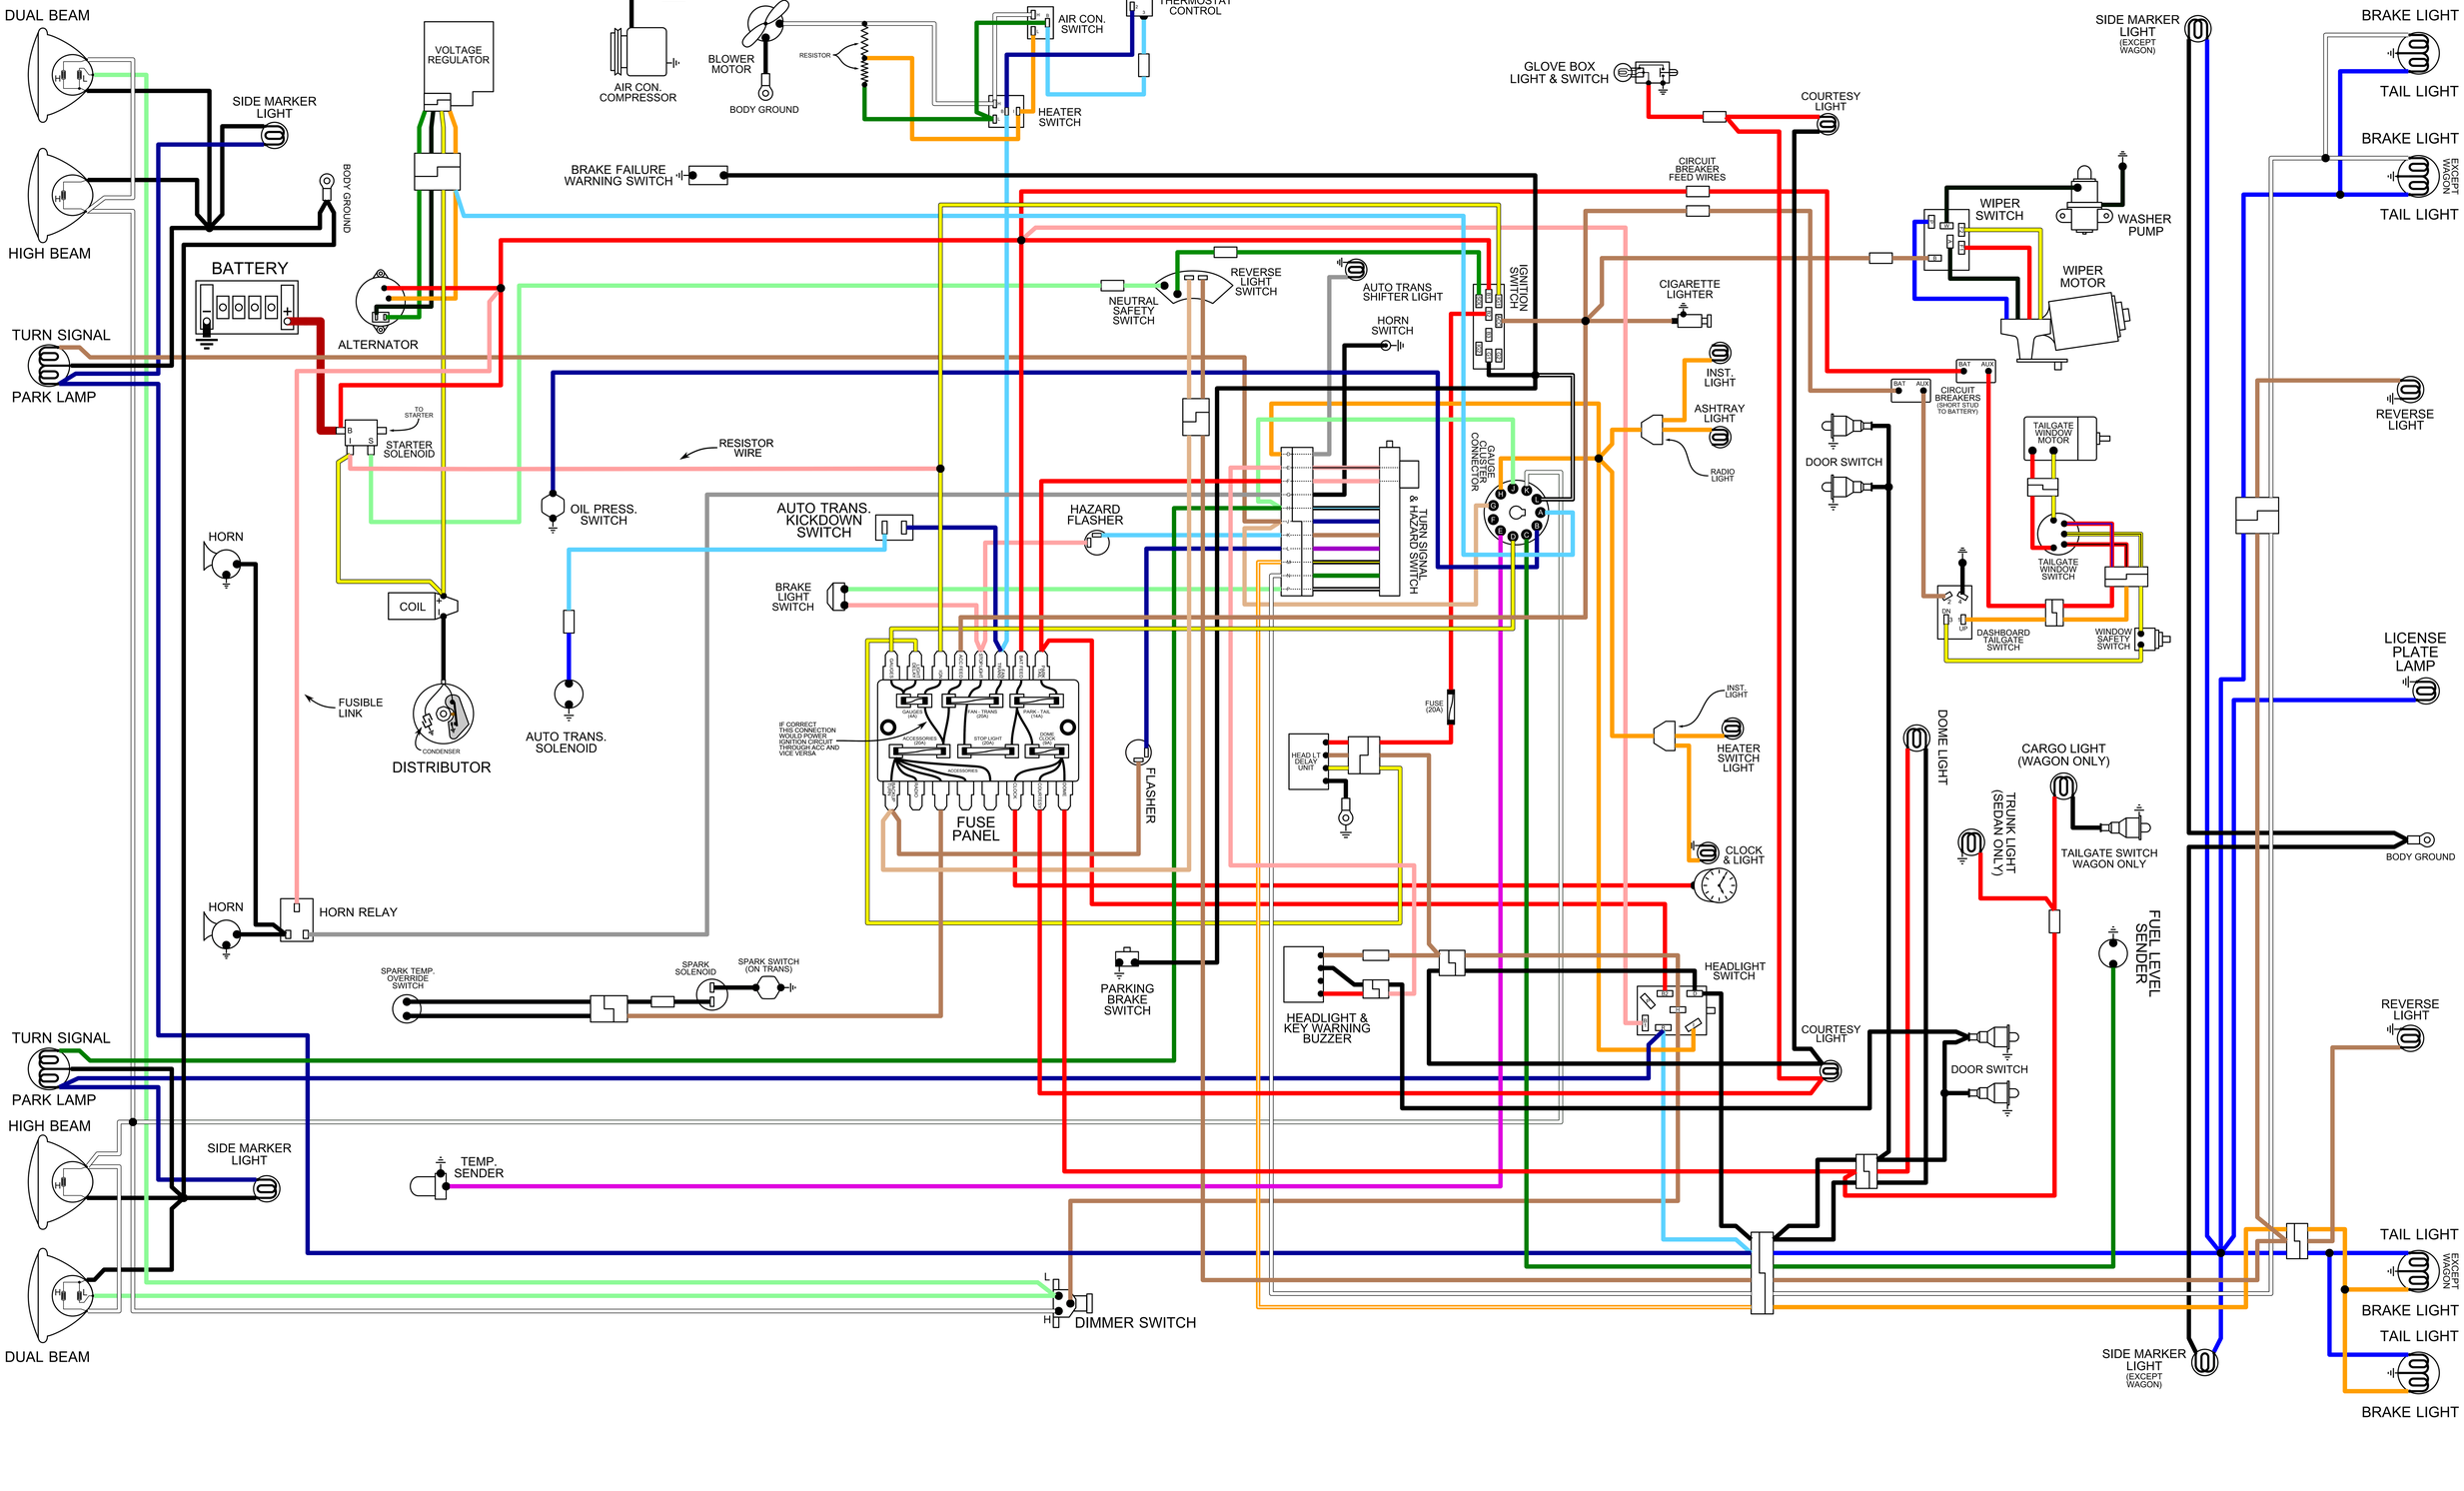


1971 AMC AMBASSADOR
MAIN POWER

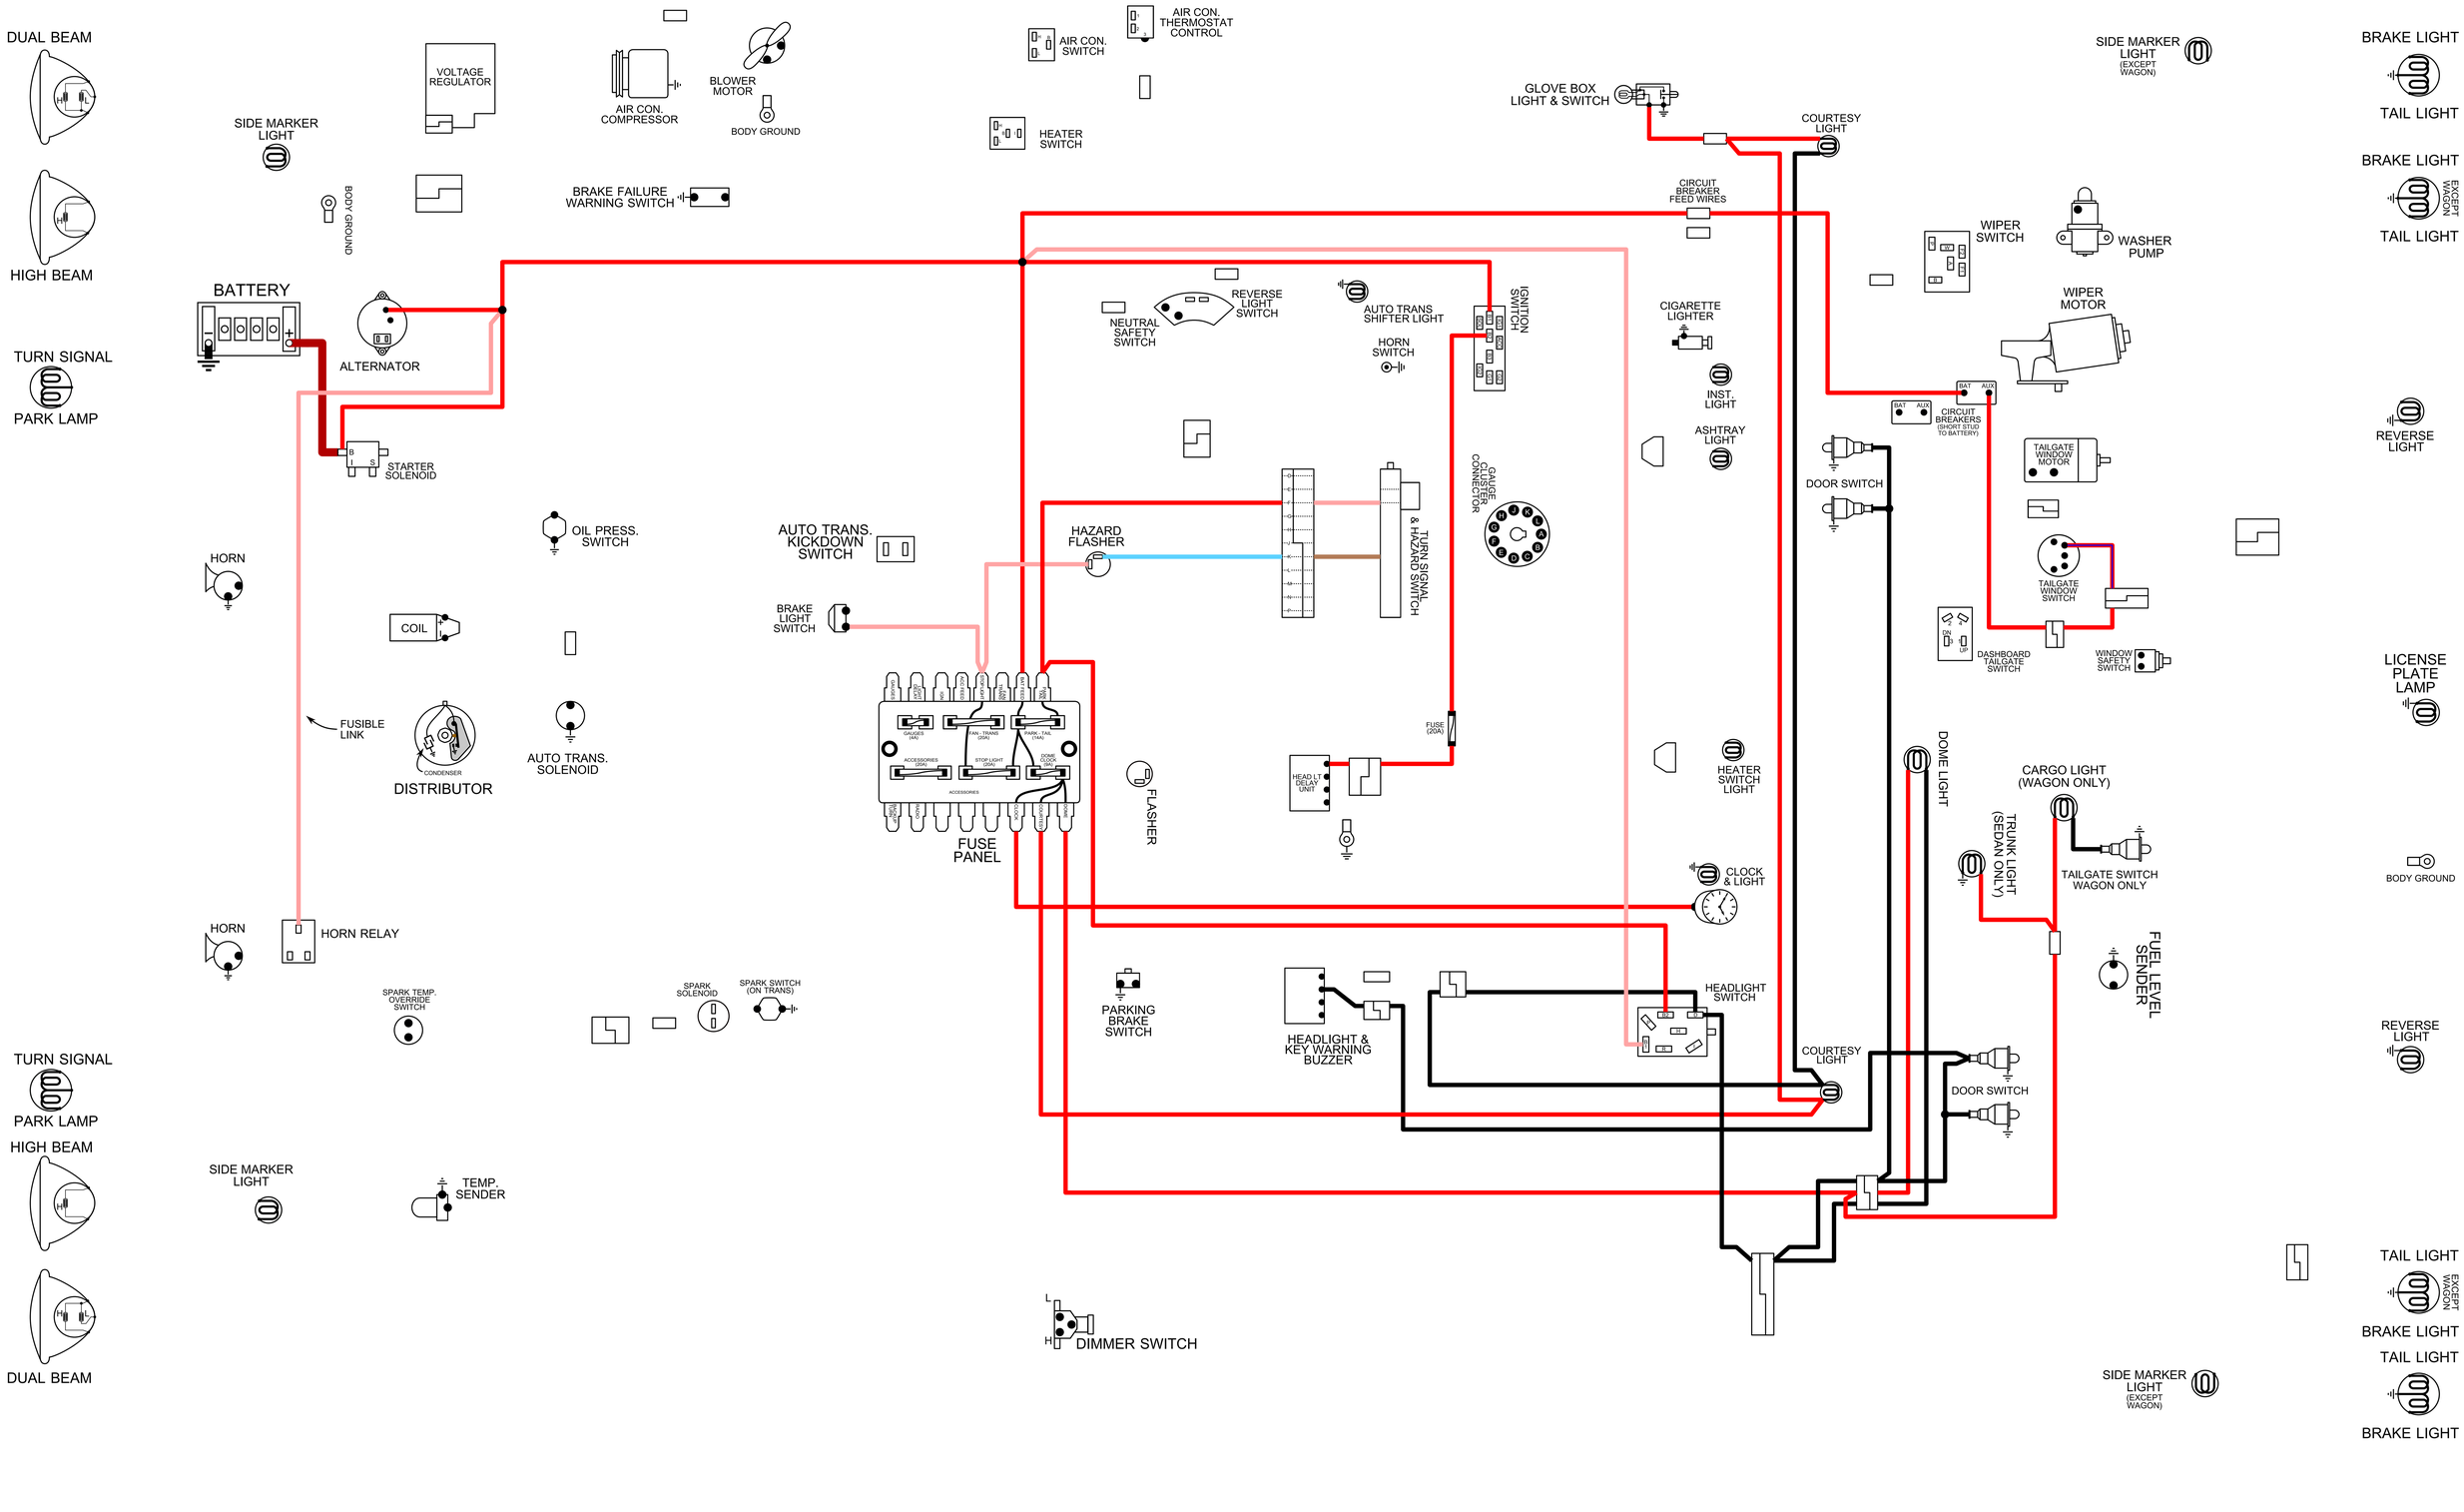


CINCO

1971 AMC AMBASSADOR
ACCESSORY POWER

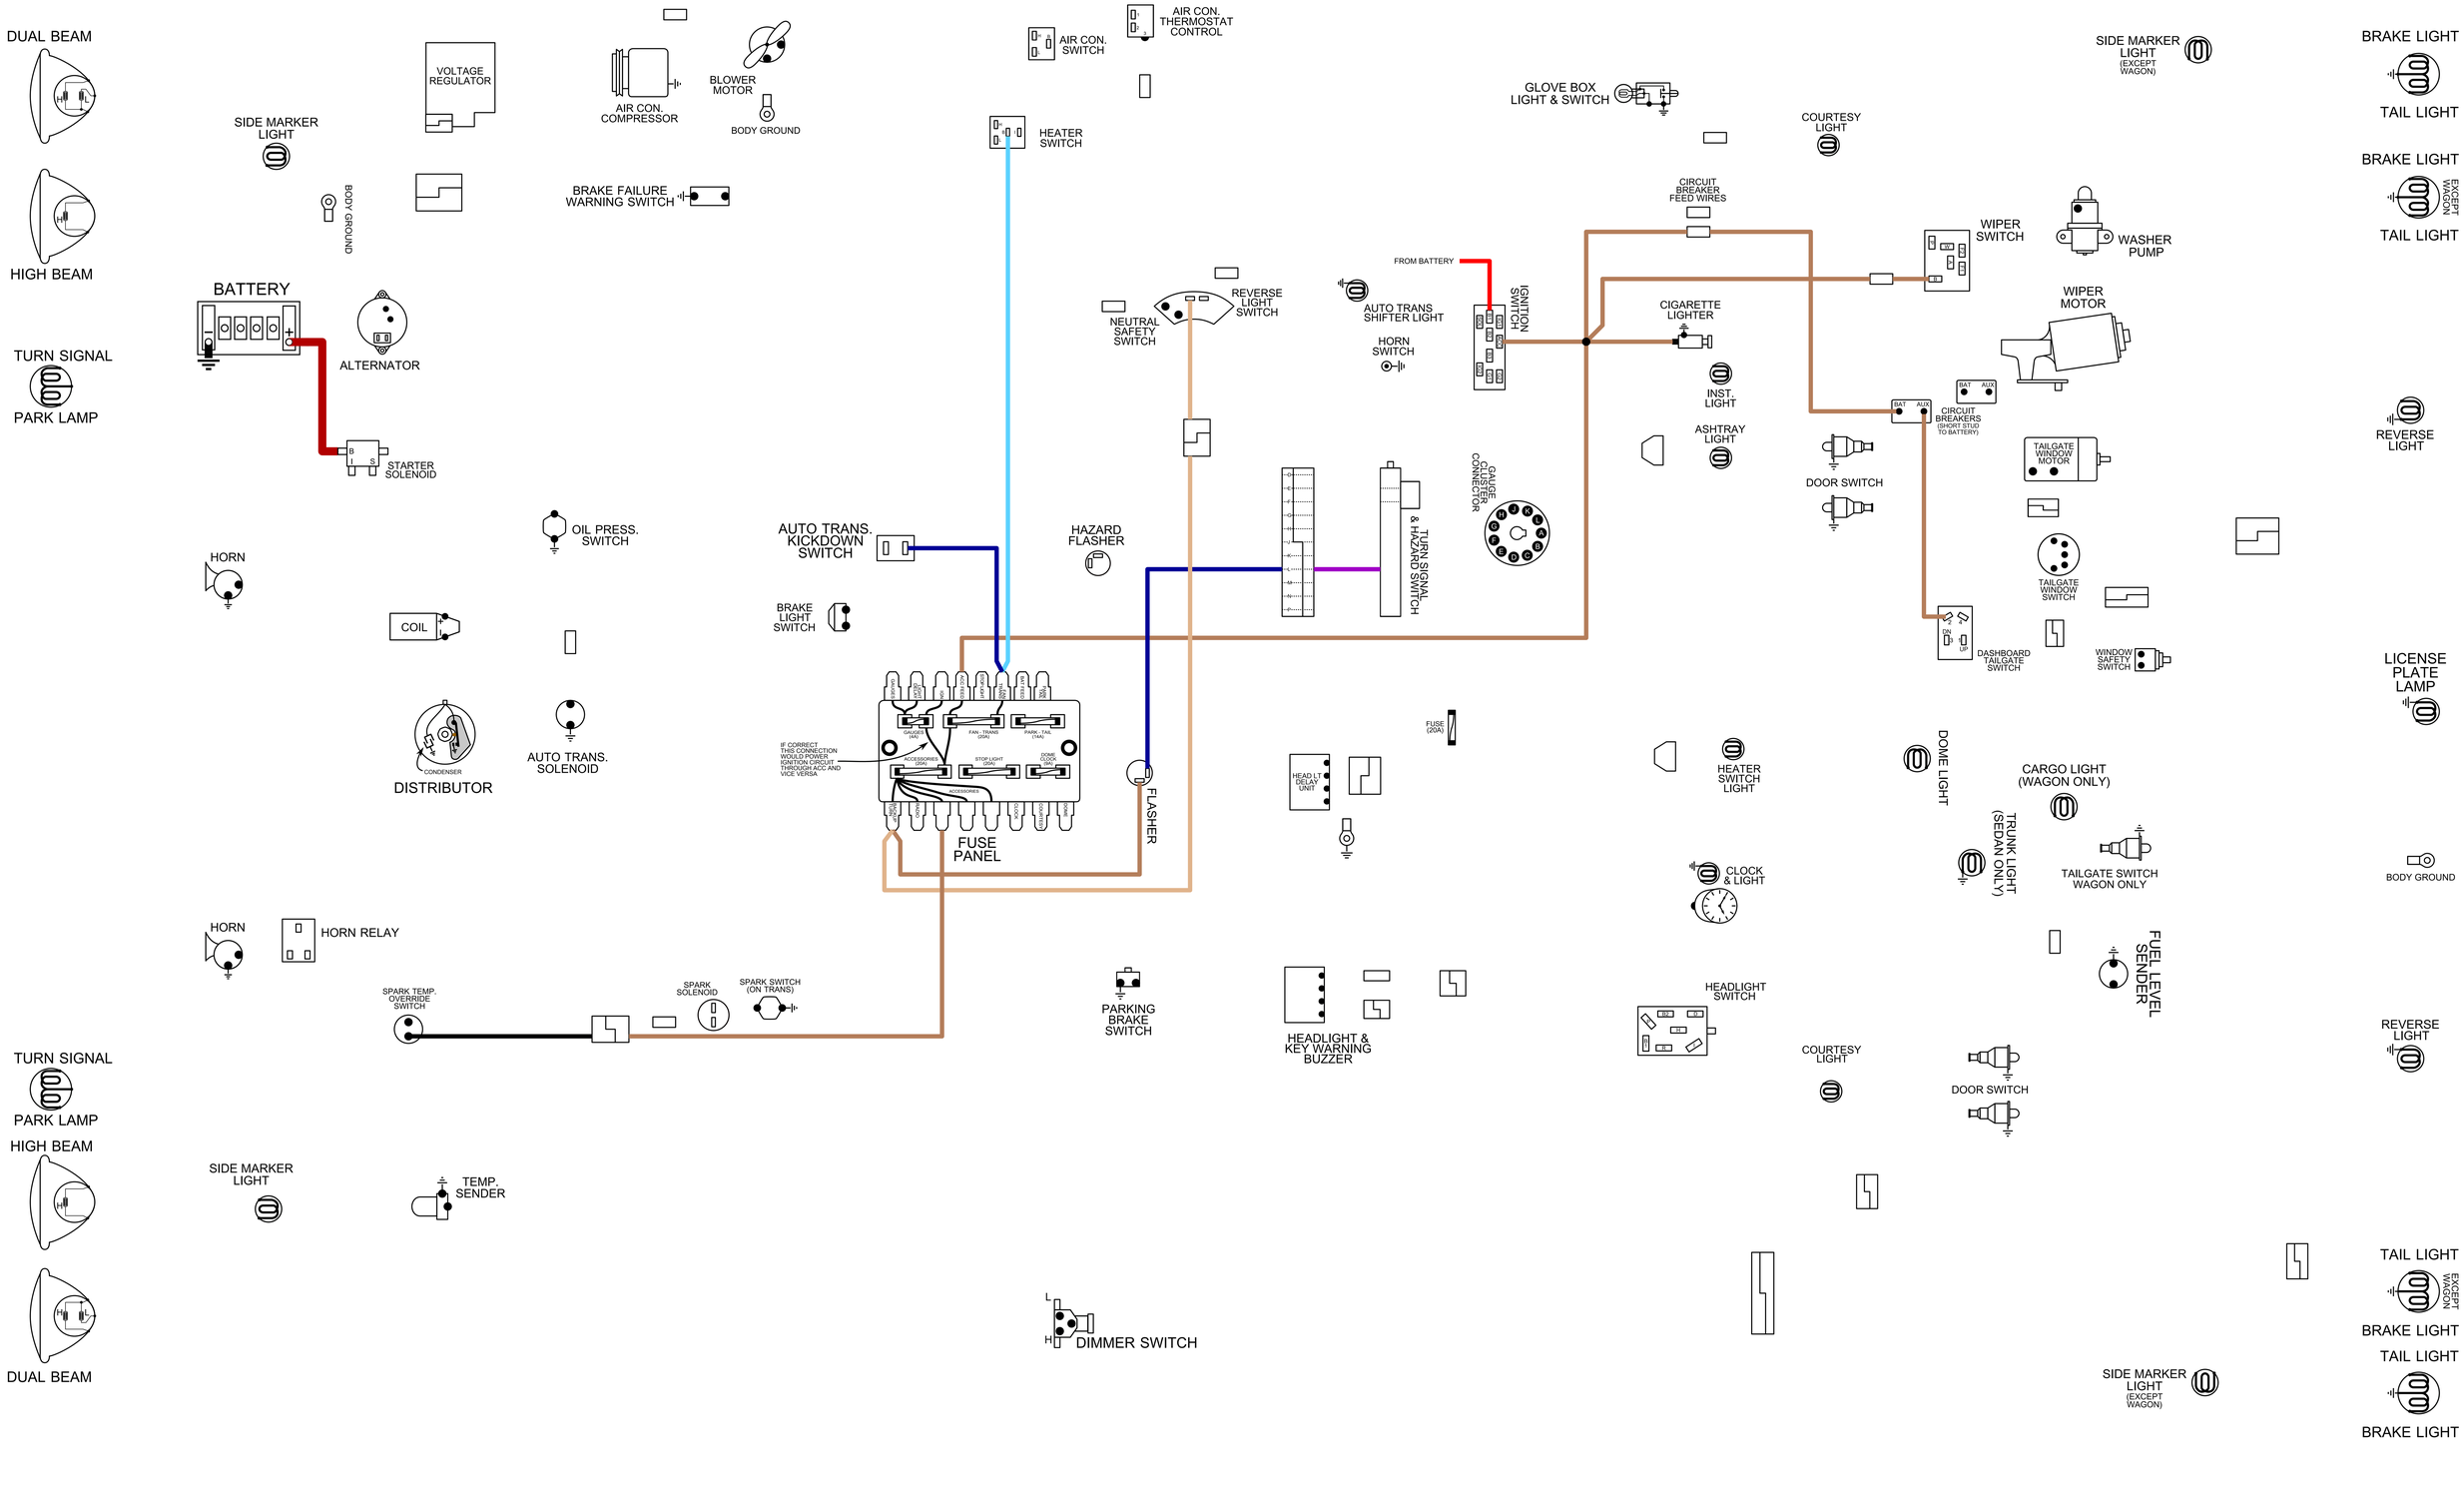


1971 AMC AMBASSADOR
IGNITION SYSTEM

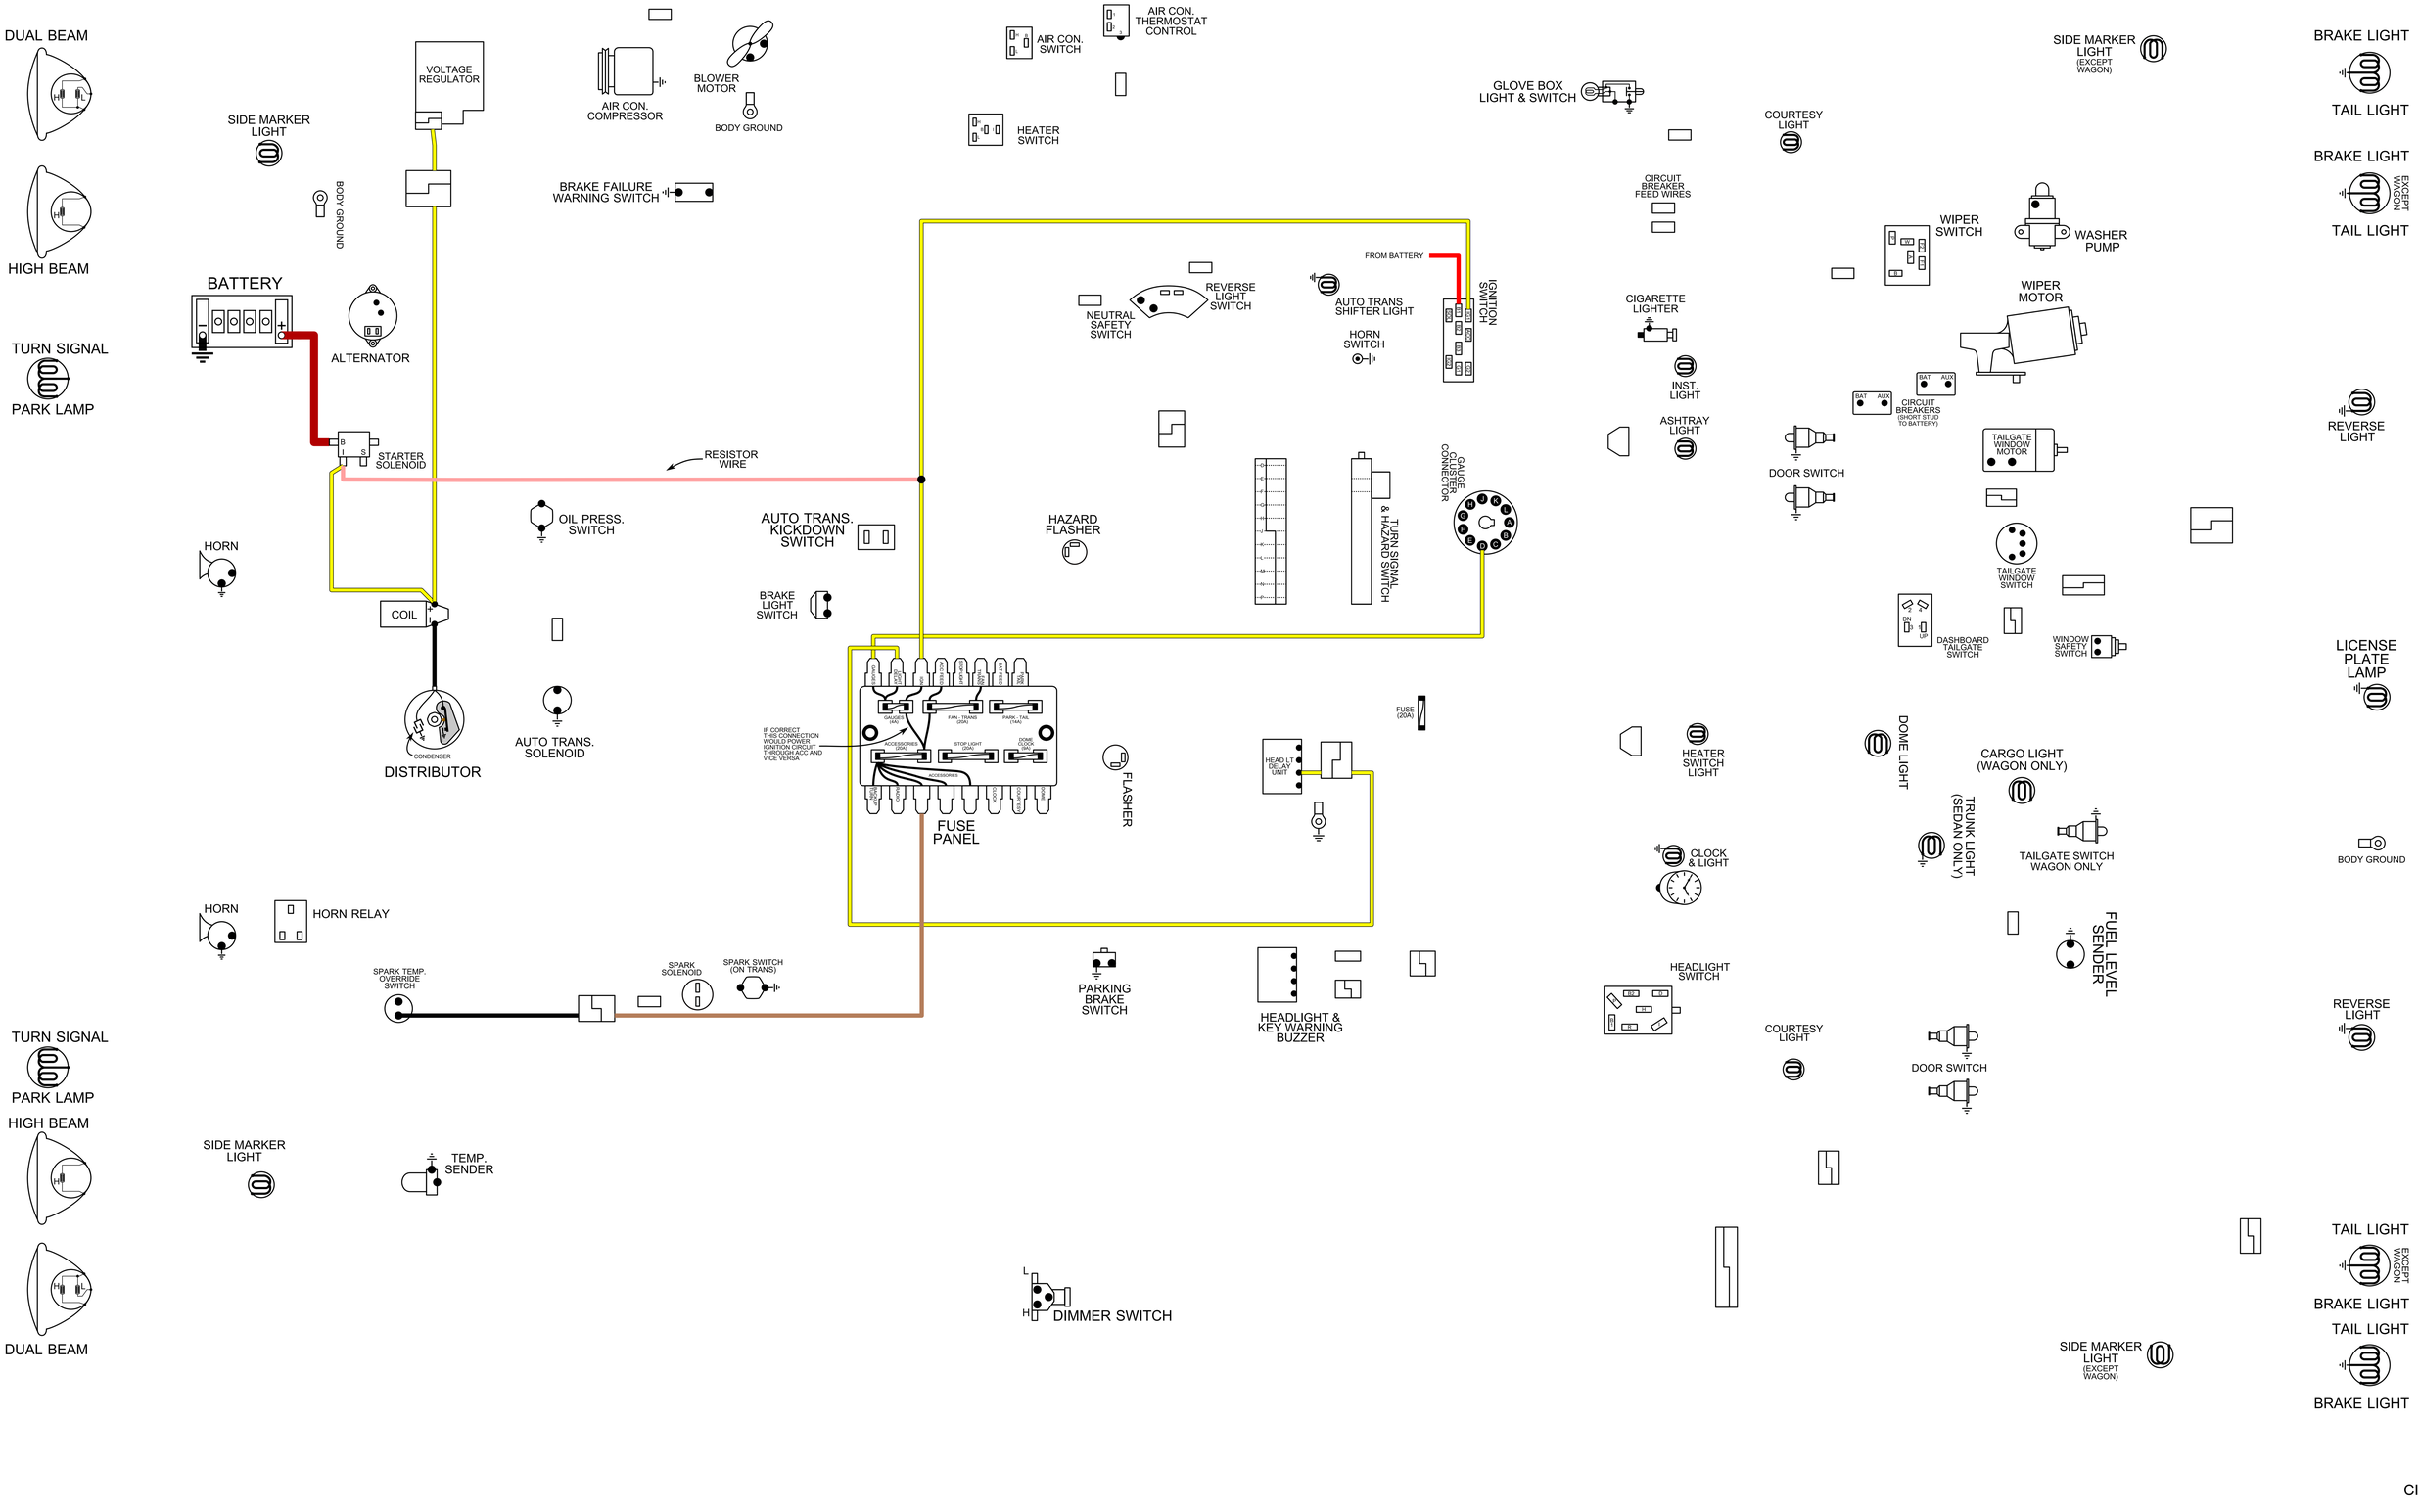


CINCO

1971 AMC AMBASSADOR
STARTING SYSTEM

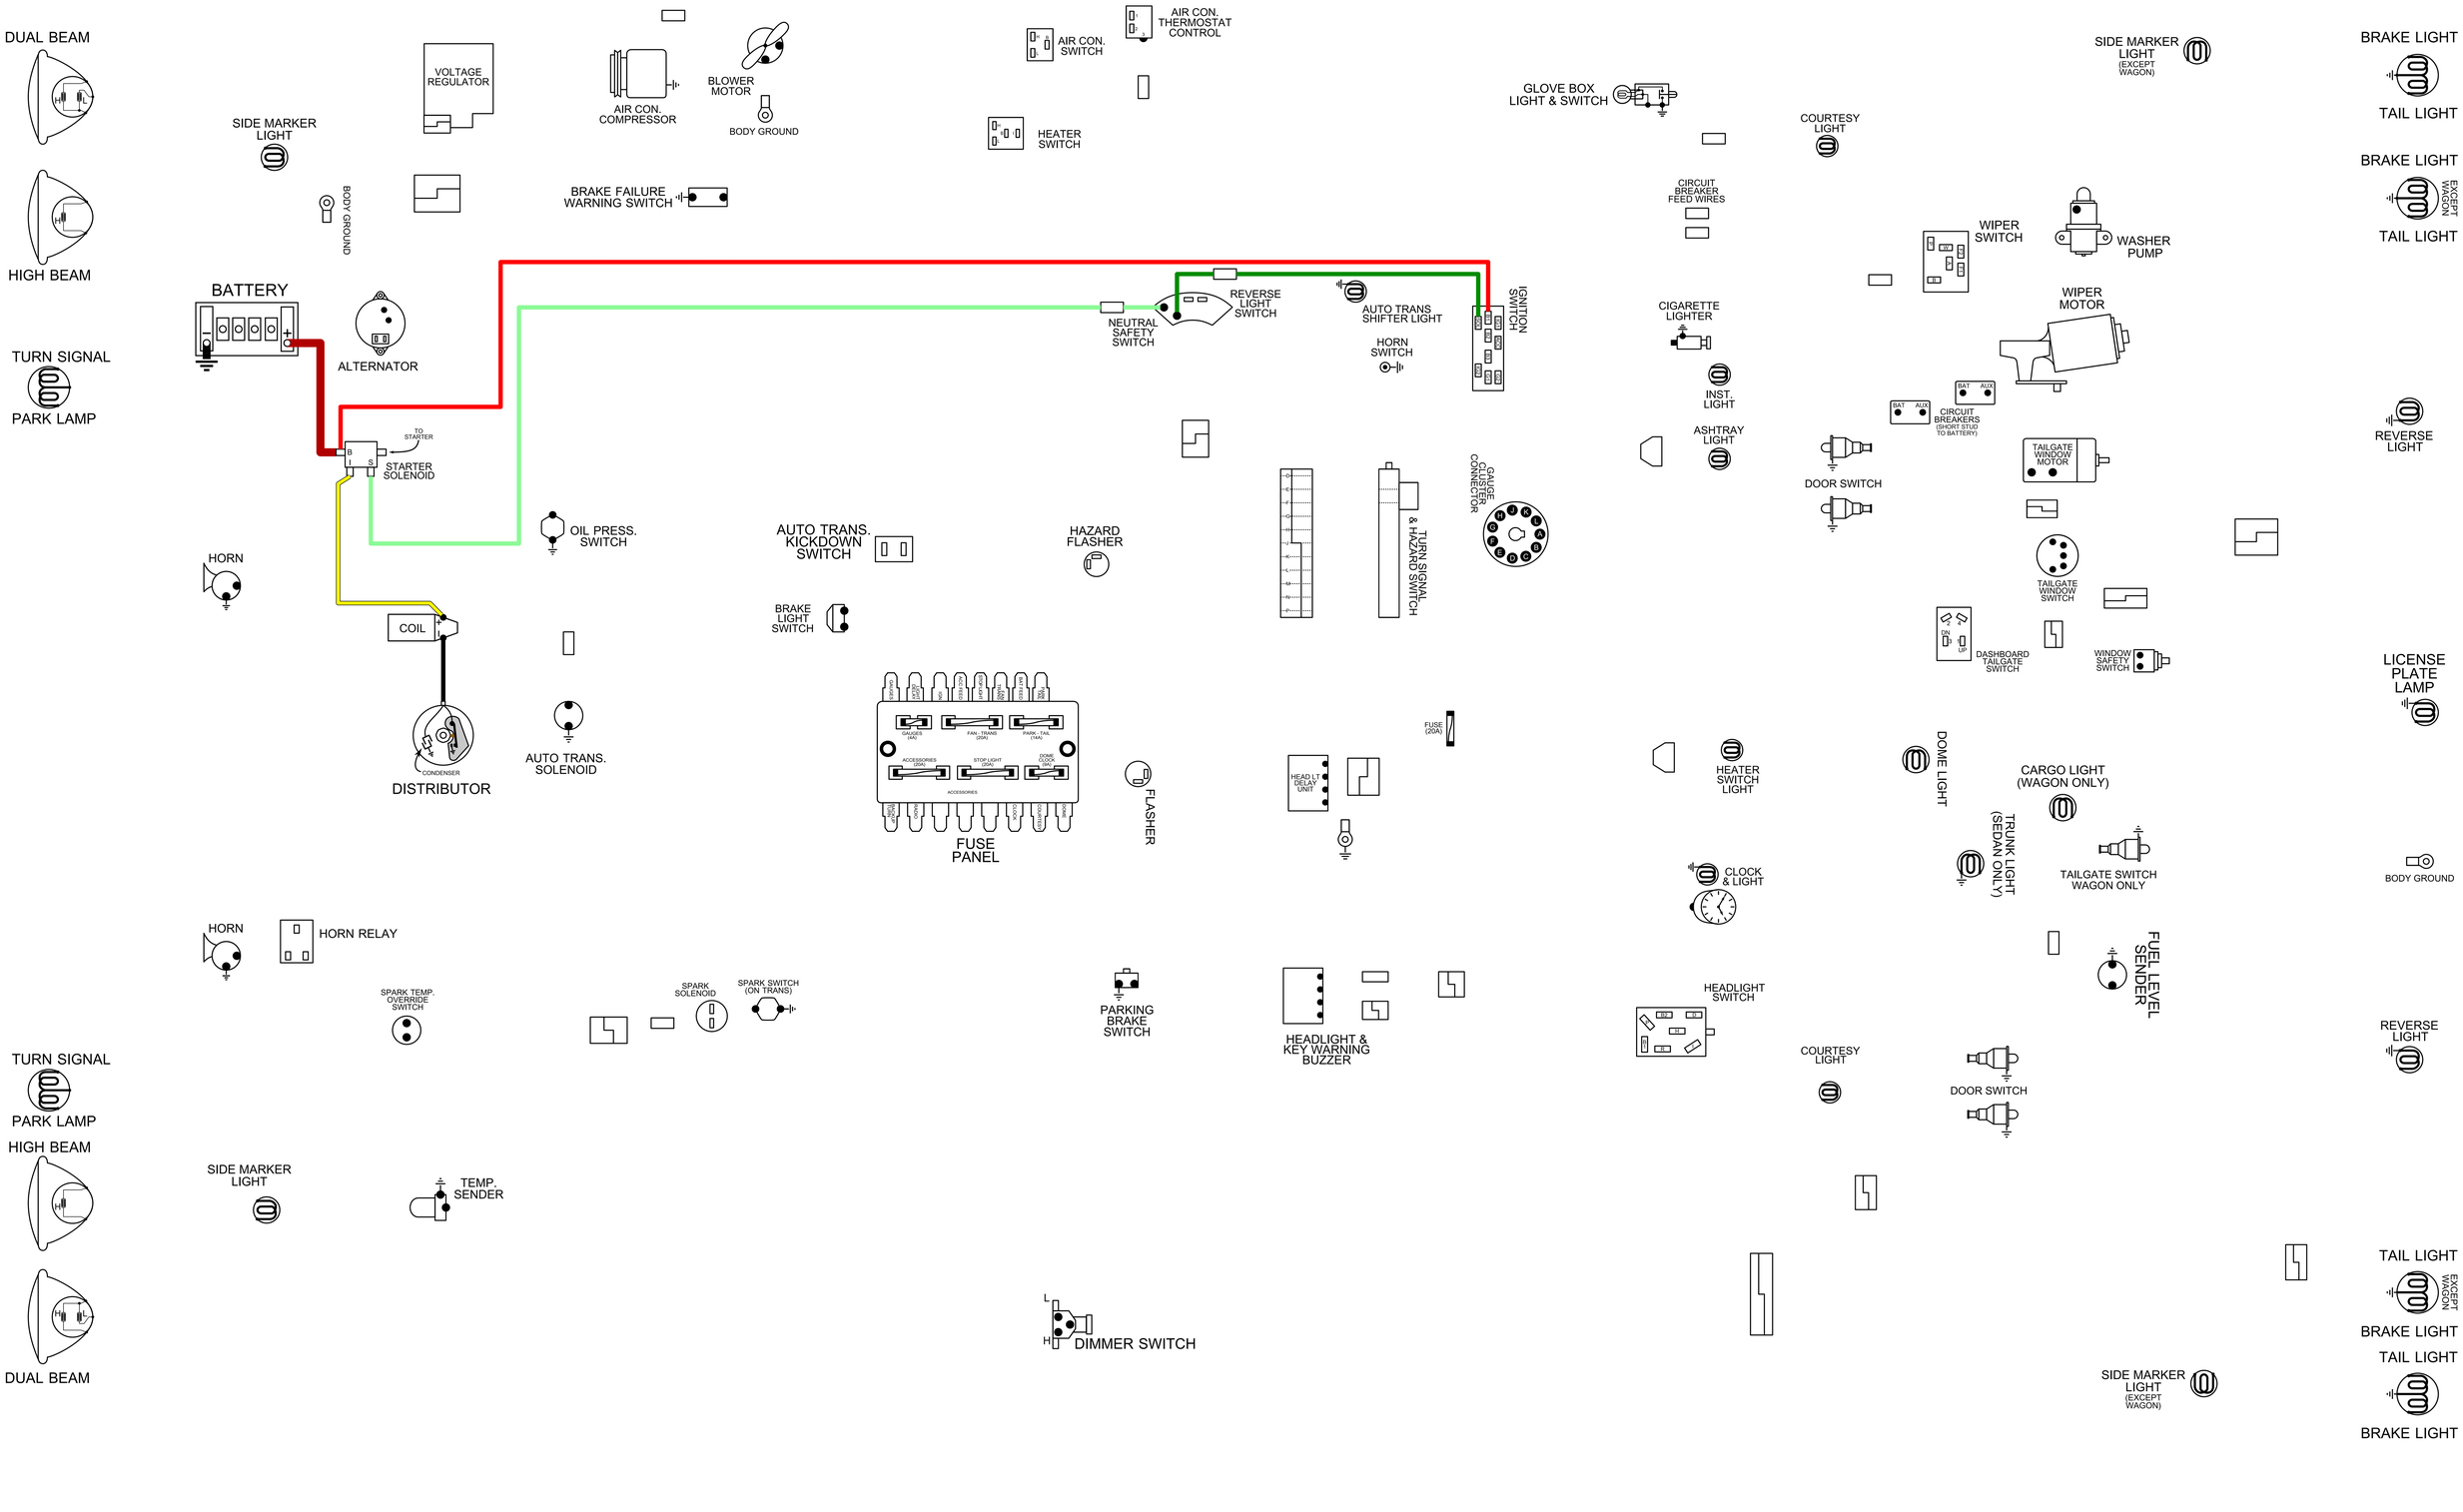


CINCO

1971 AMC AMBASSADOR
CHARGING SYSTEM

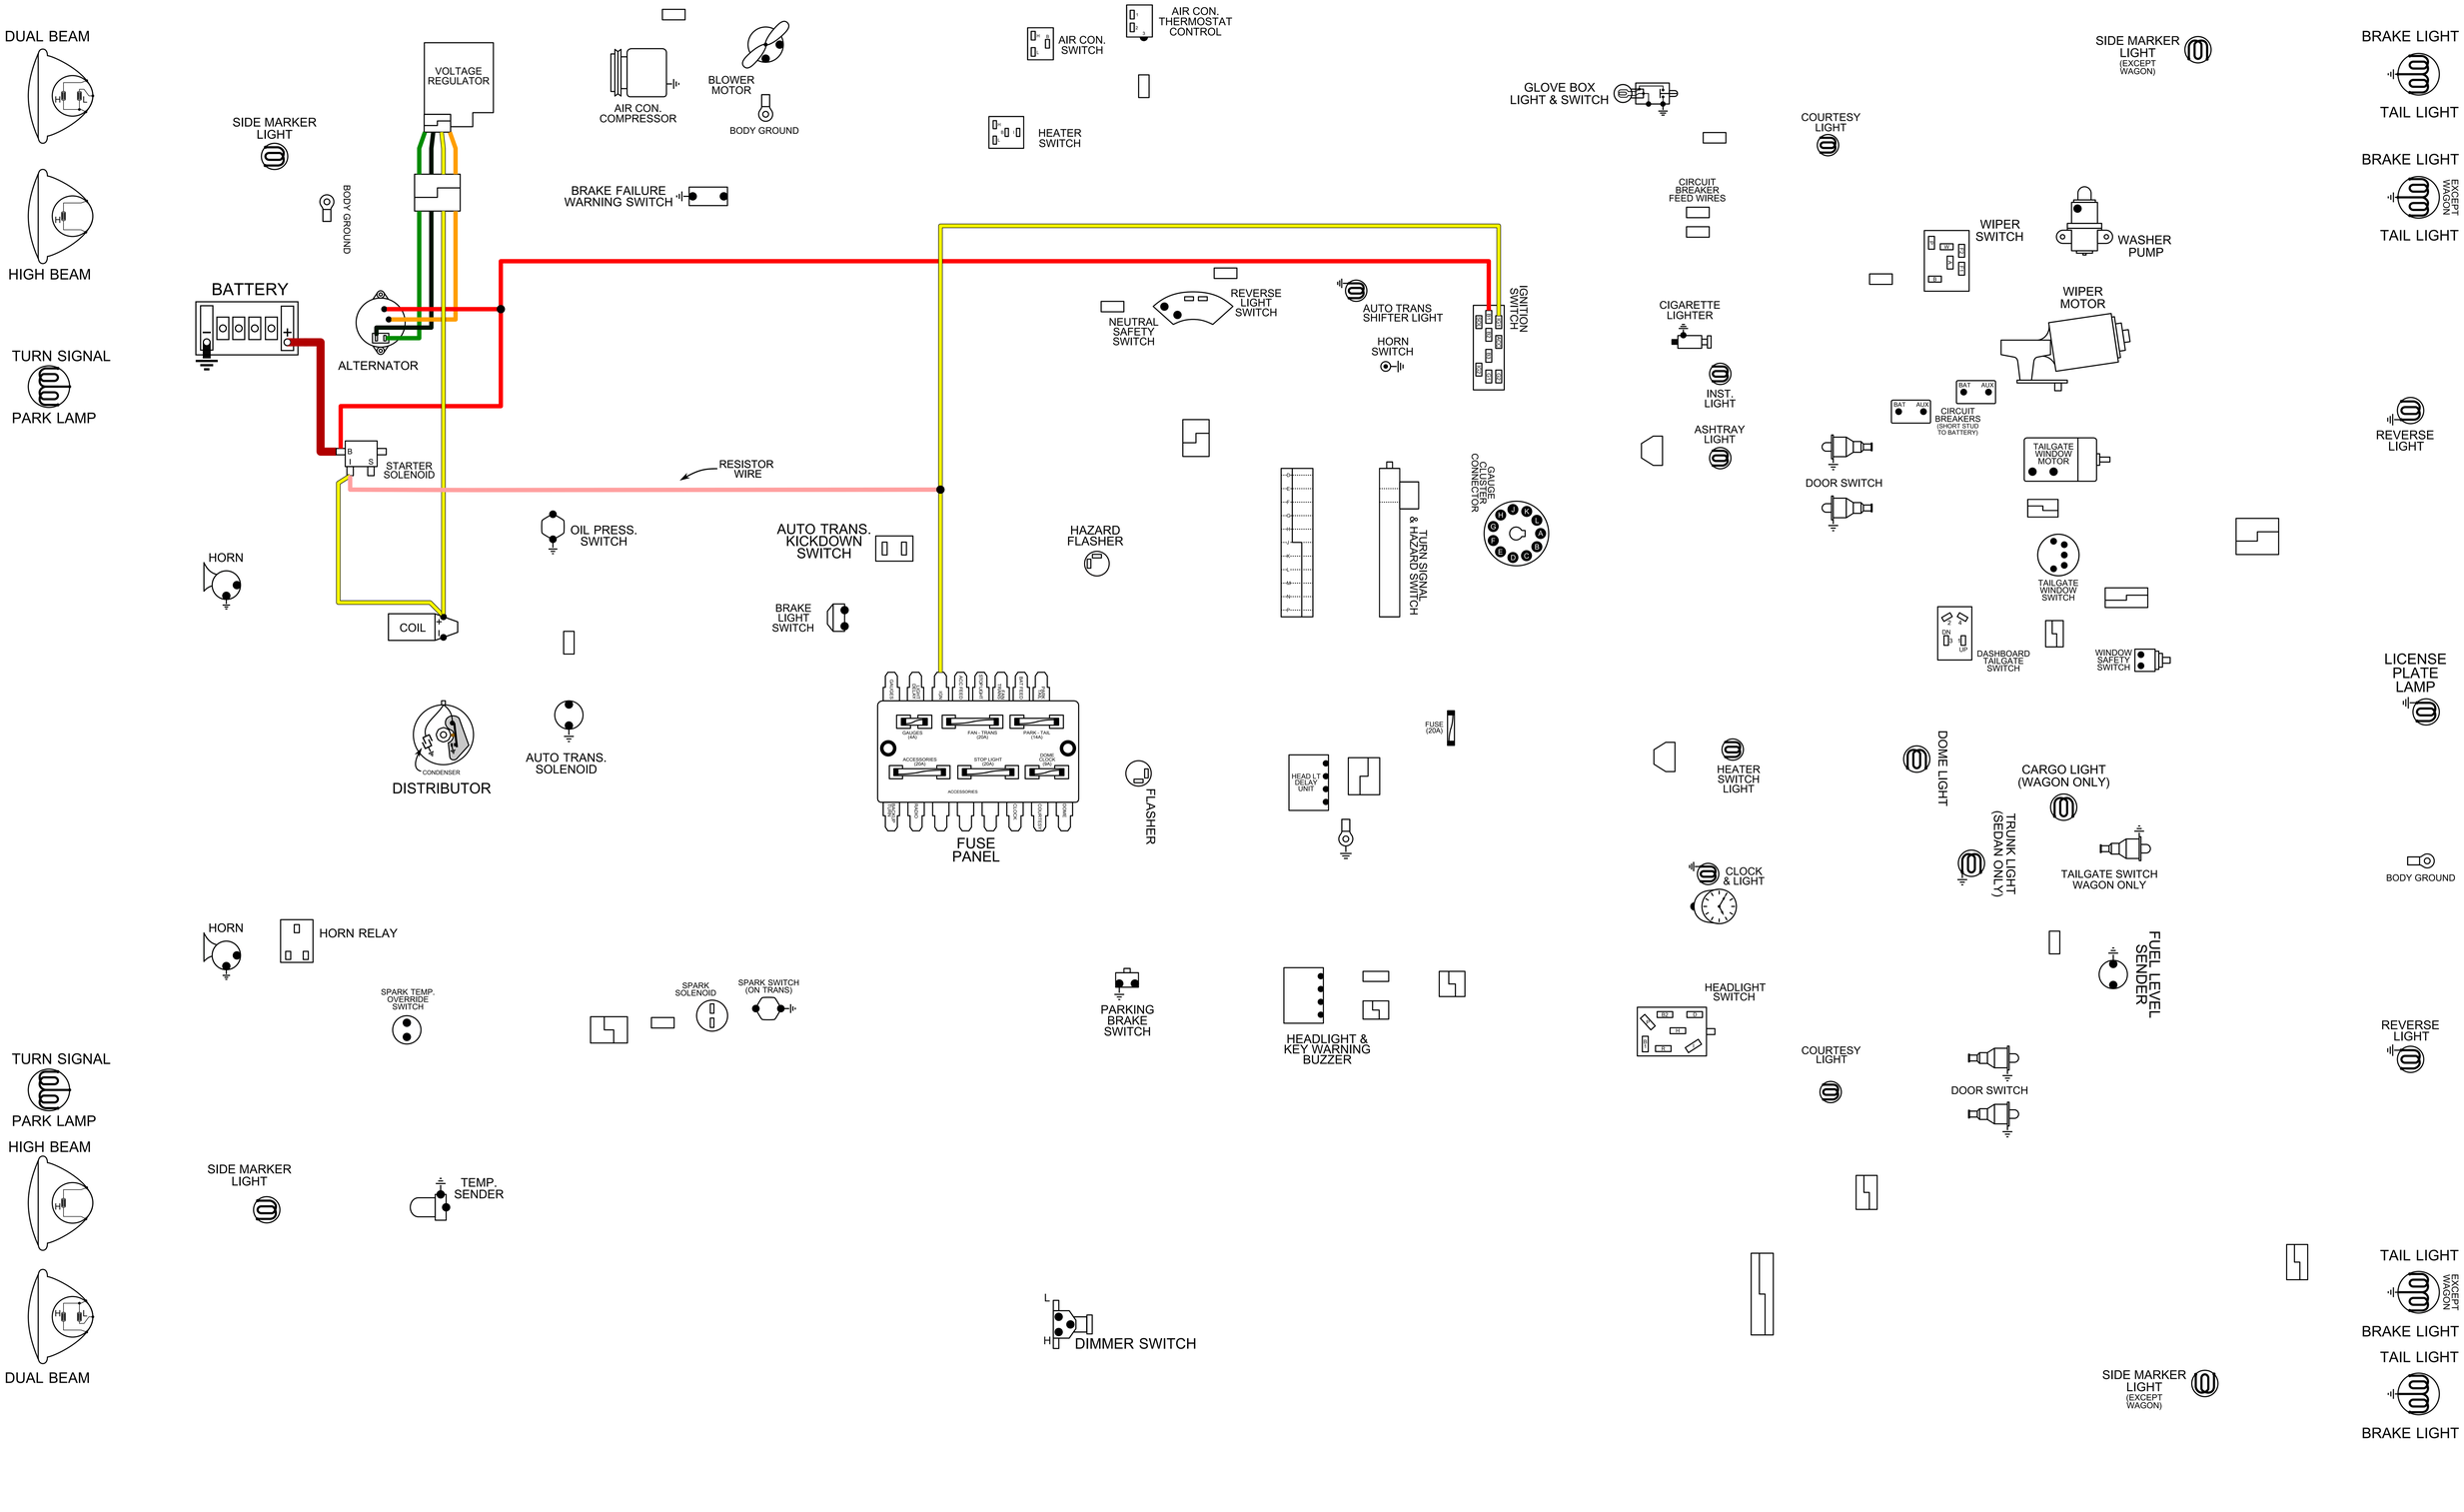


CINCO

1971 AMC AMBASSADOR
HEADLIGHTS

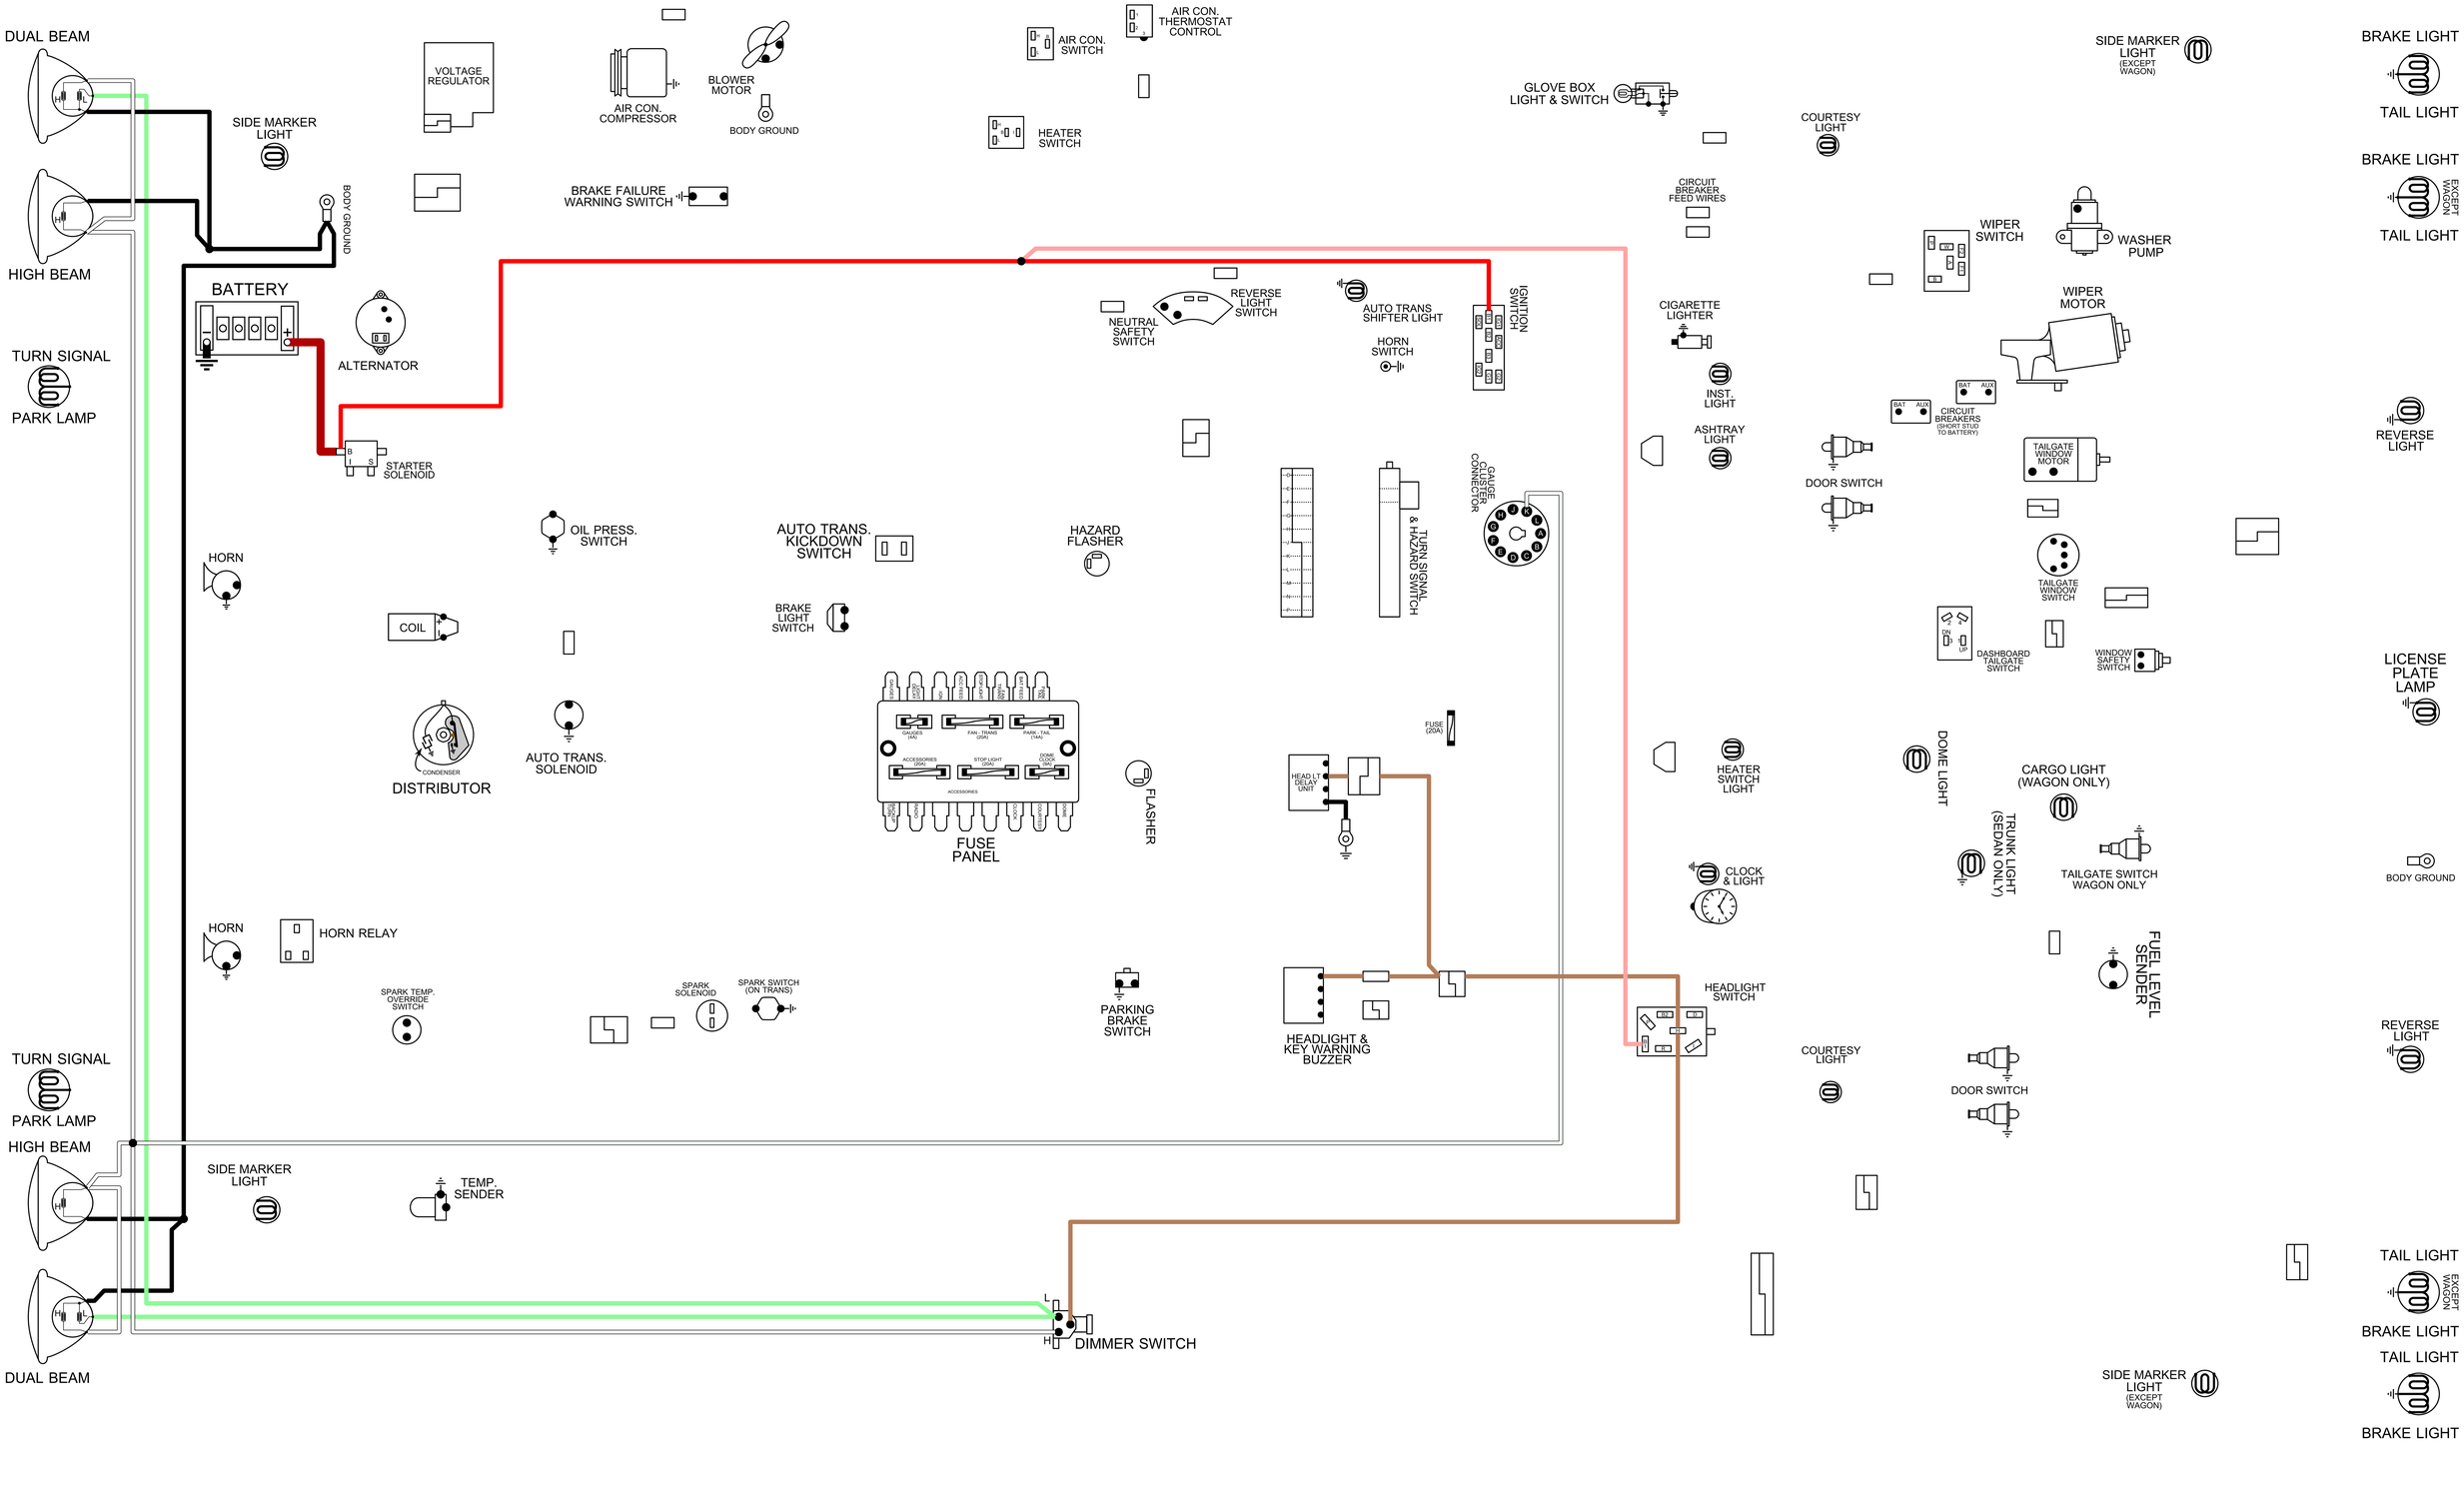


CINCO

1971 AMC AMBASSADOR
RUNNING LIGHTS

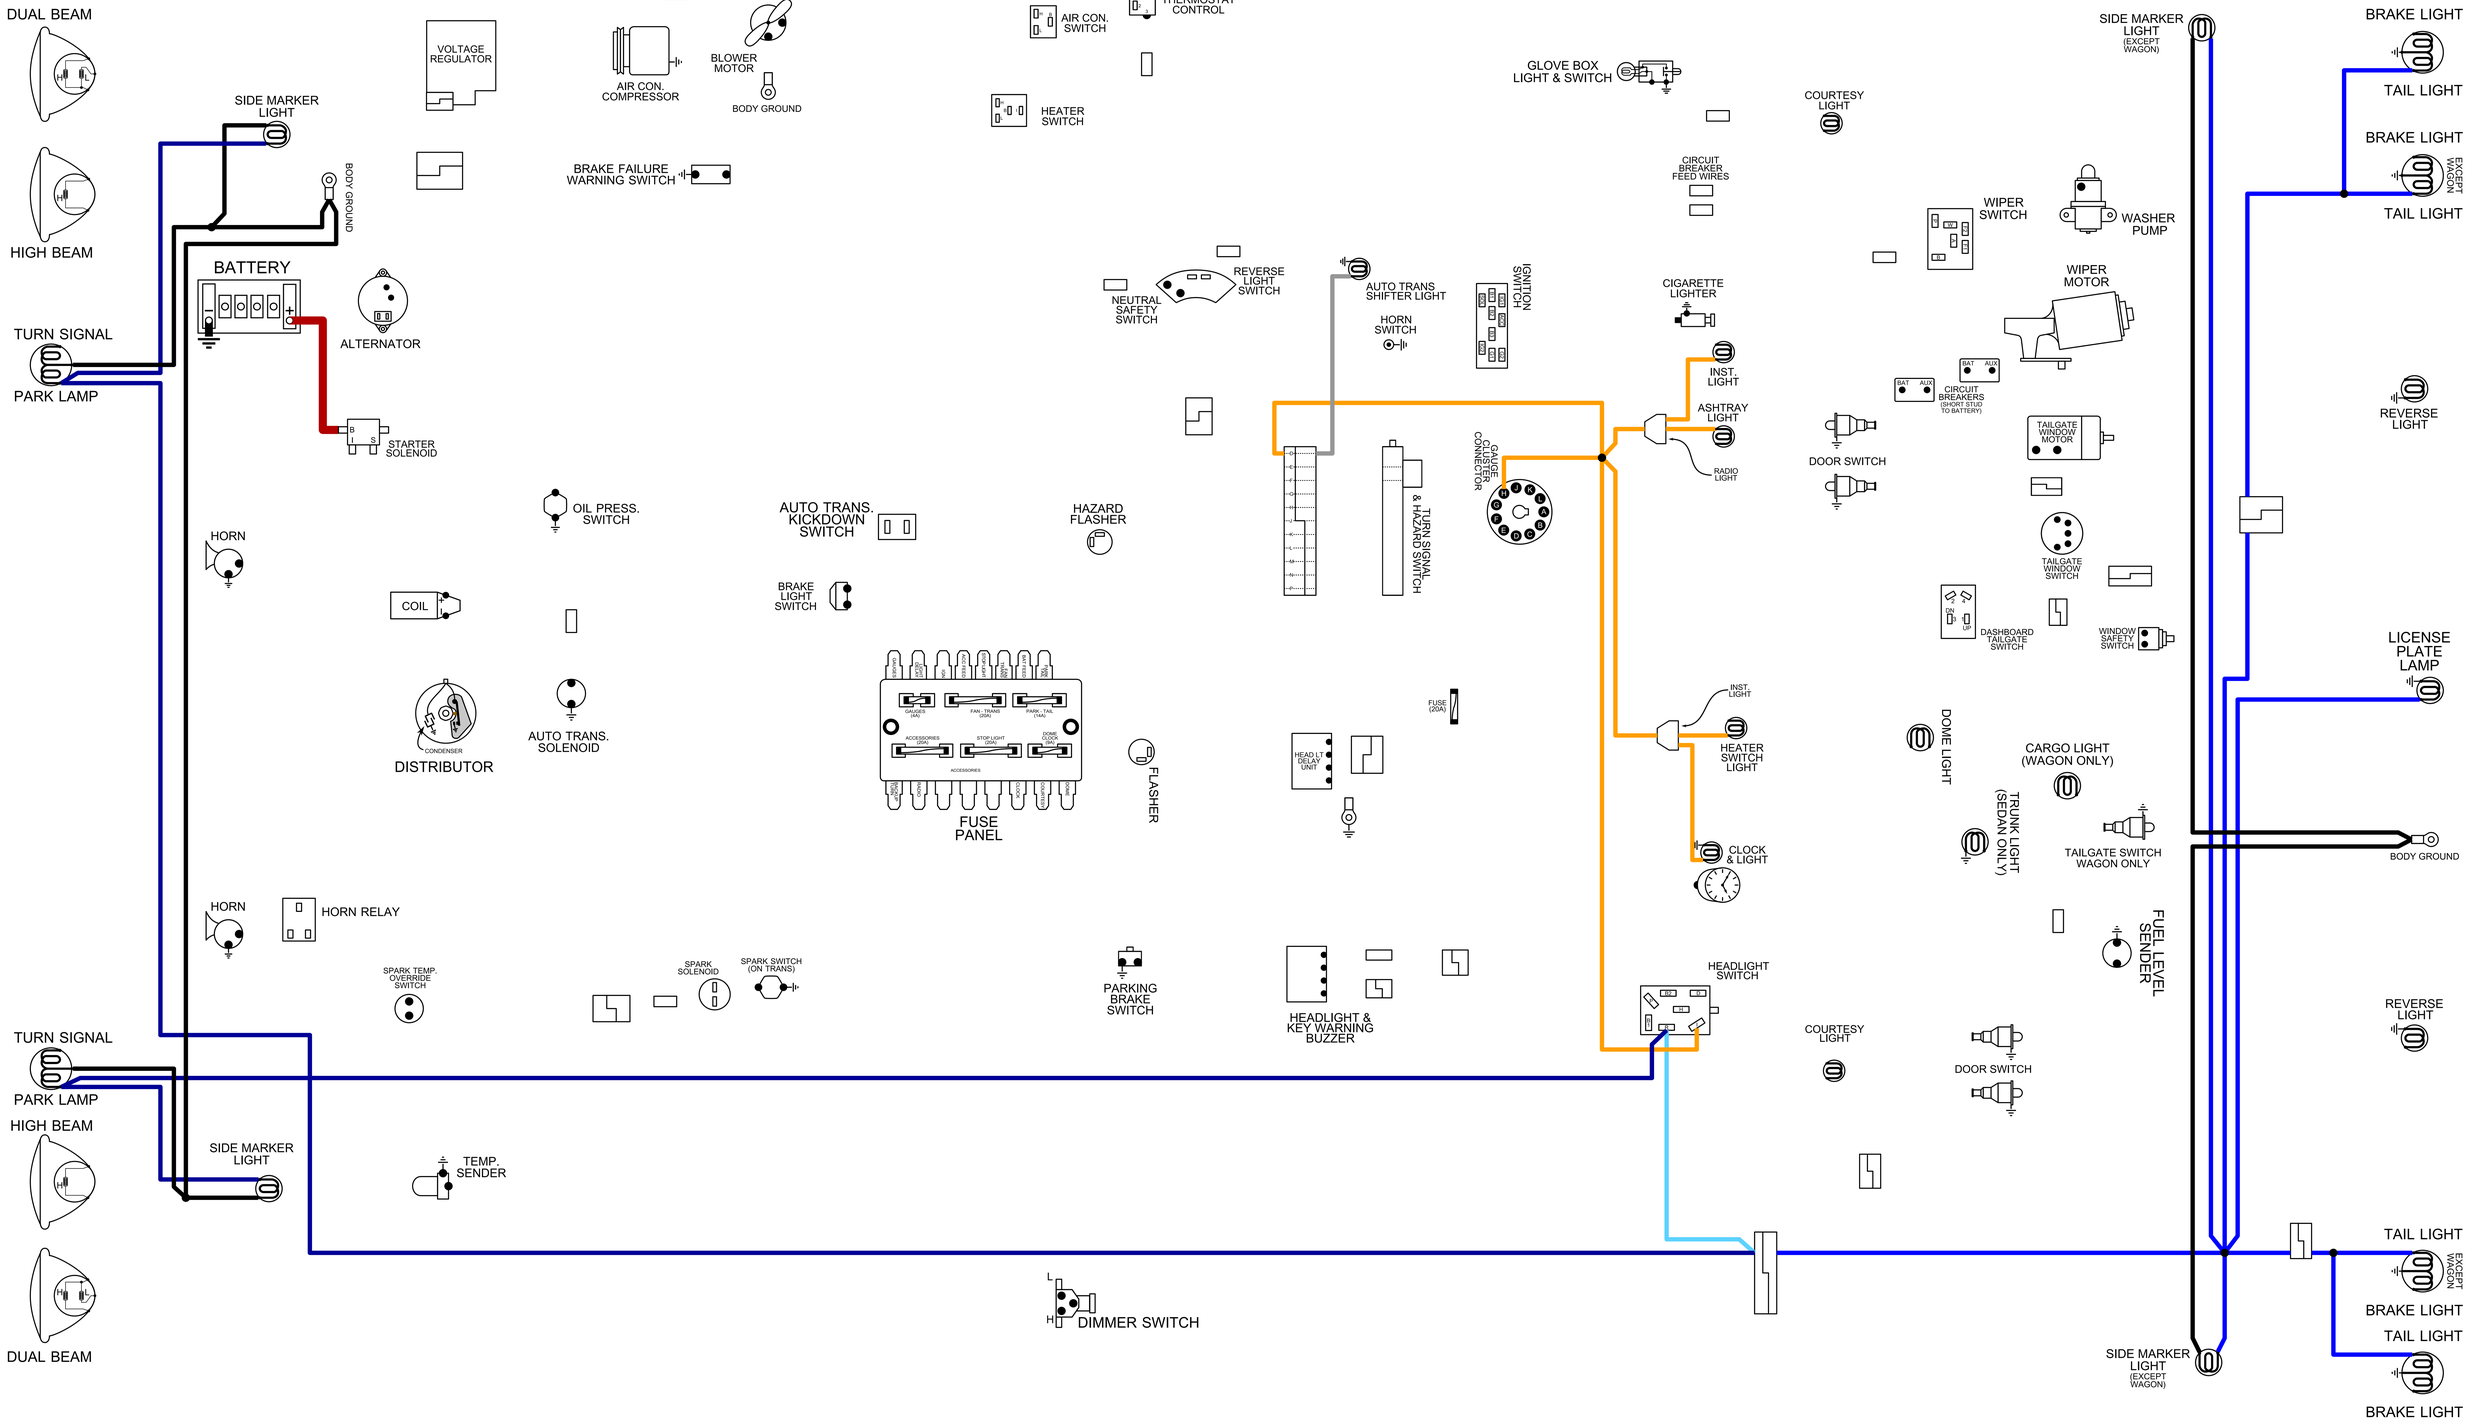


CINCO

1971 AMC AMBASSADOR
BRAKE LIGHTS

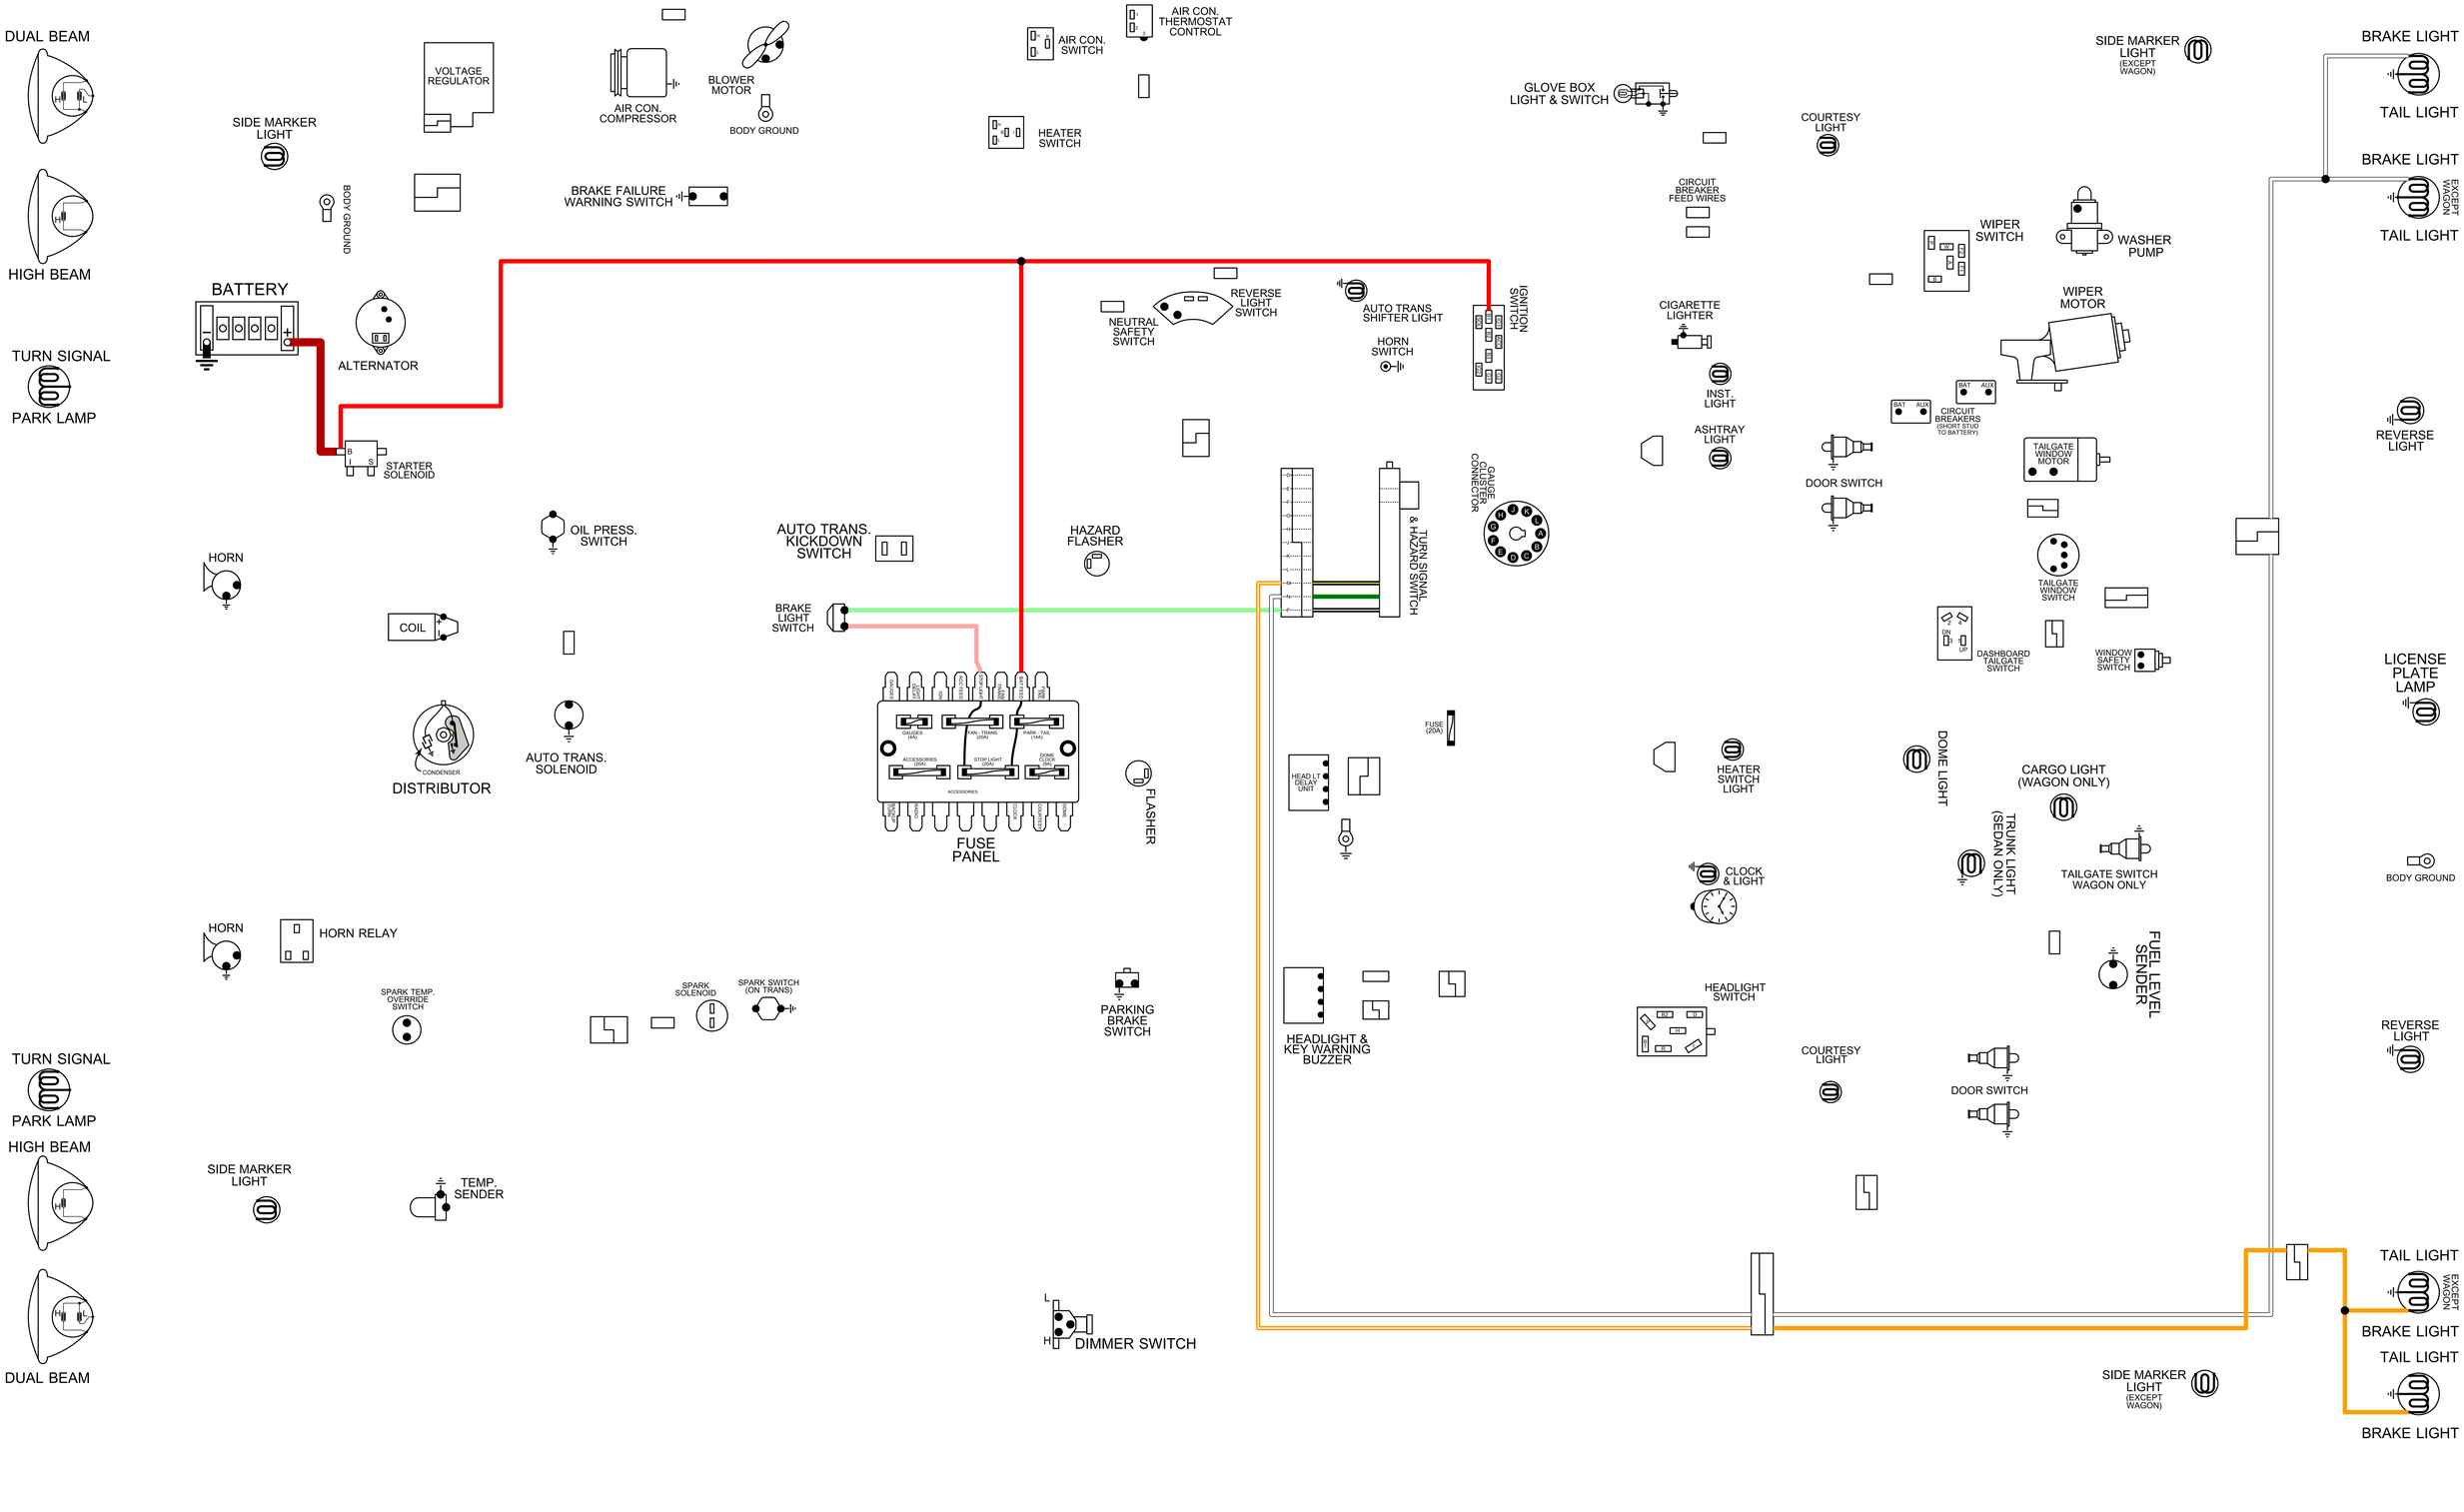


CINCO

1971 AMC AMBASSADOR
TURN SIGNALS

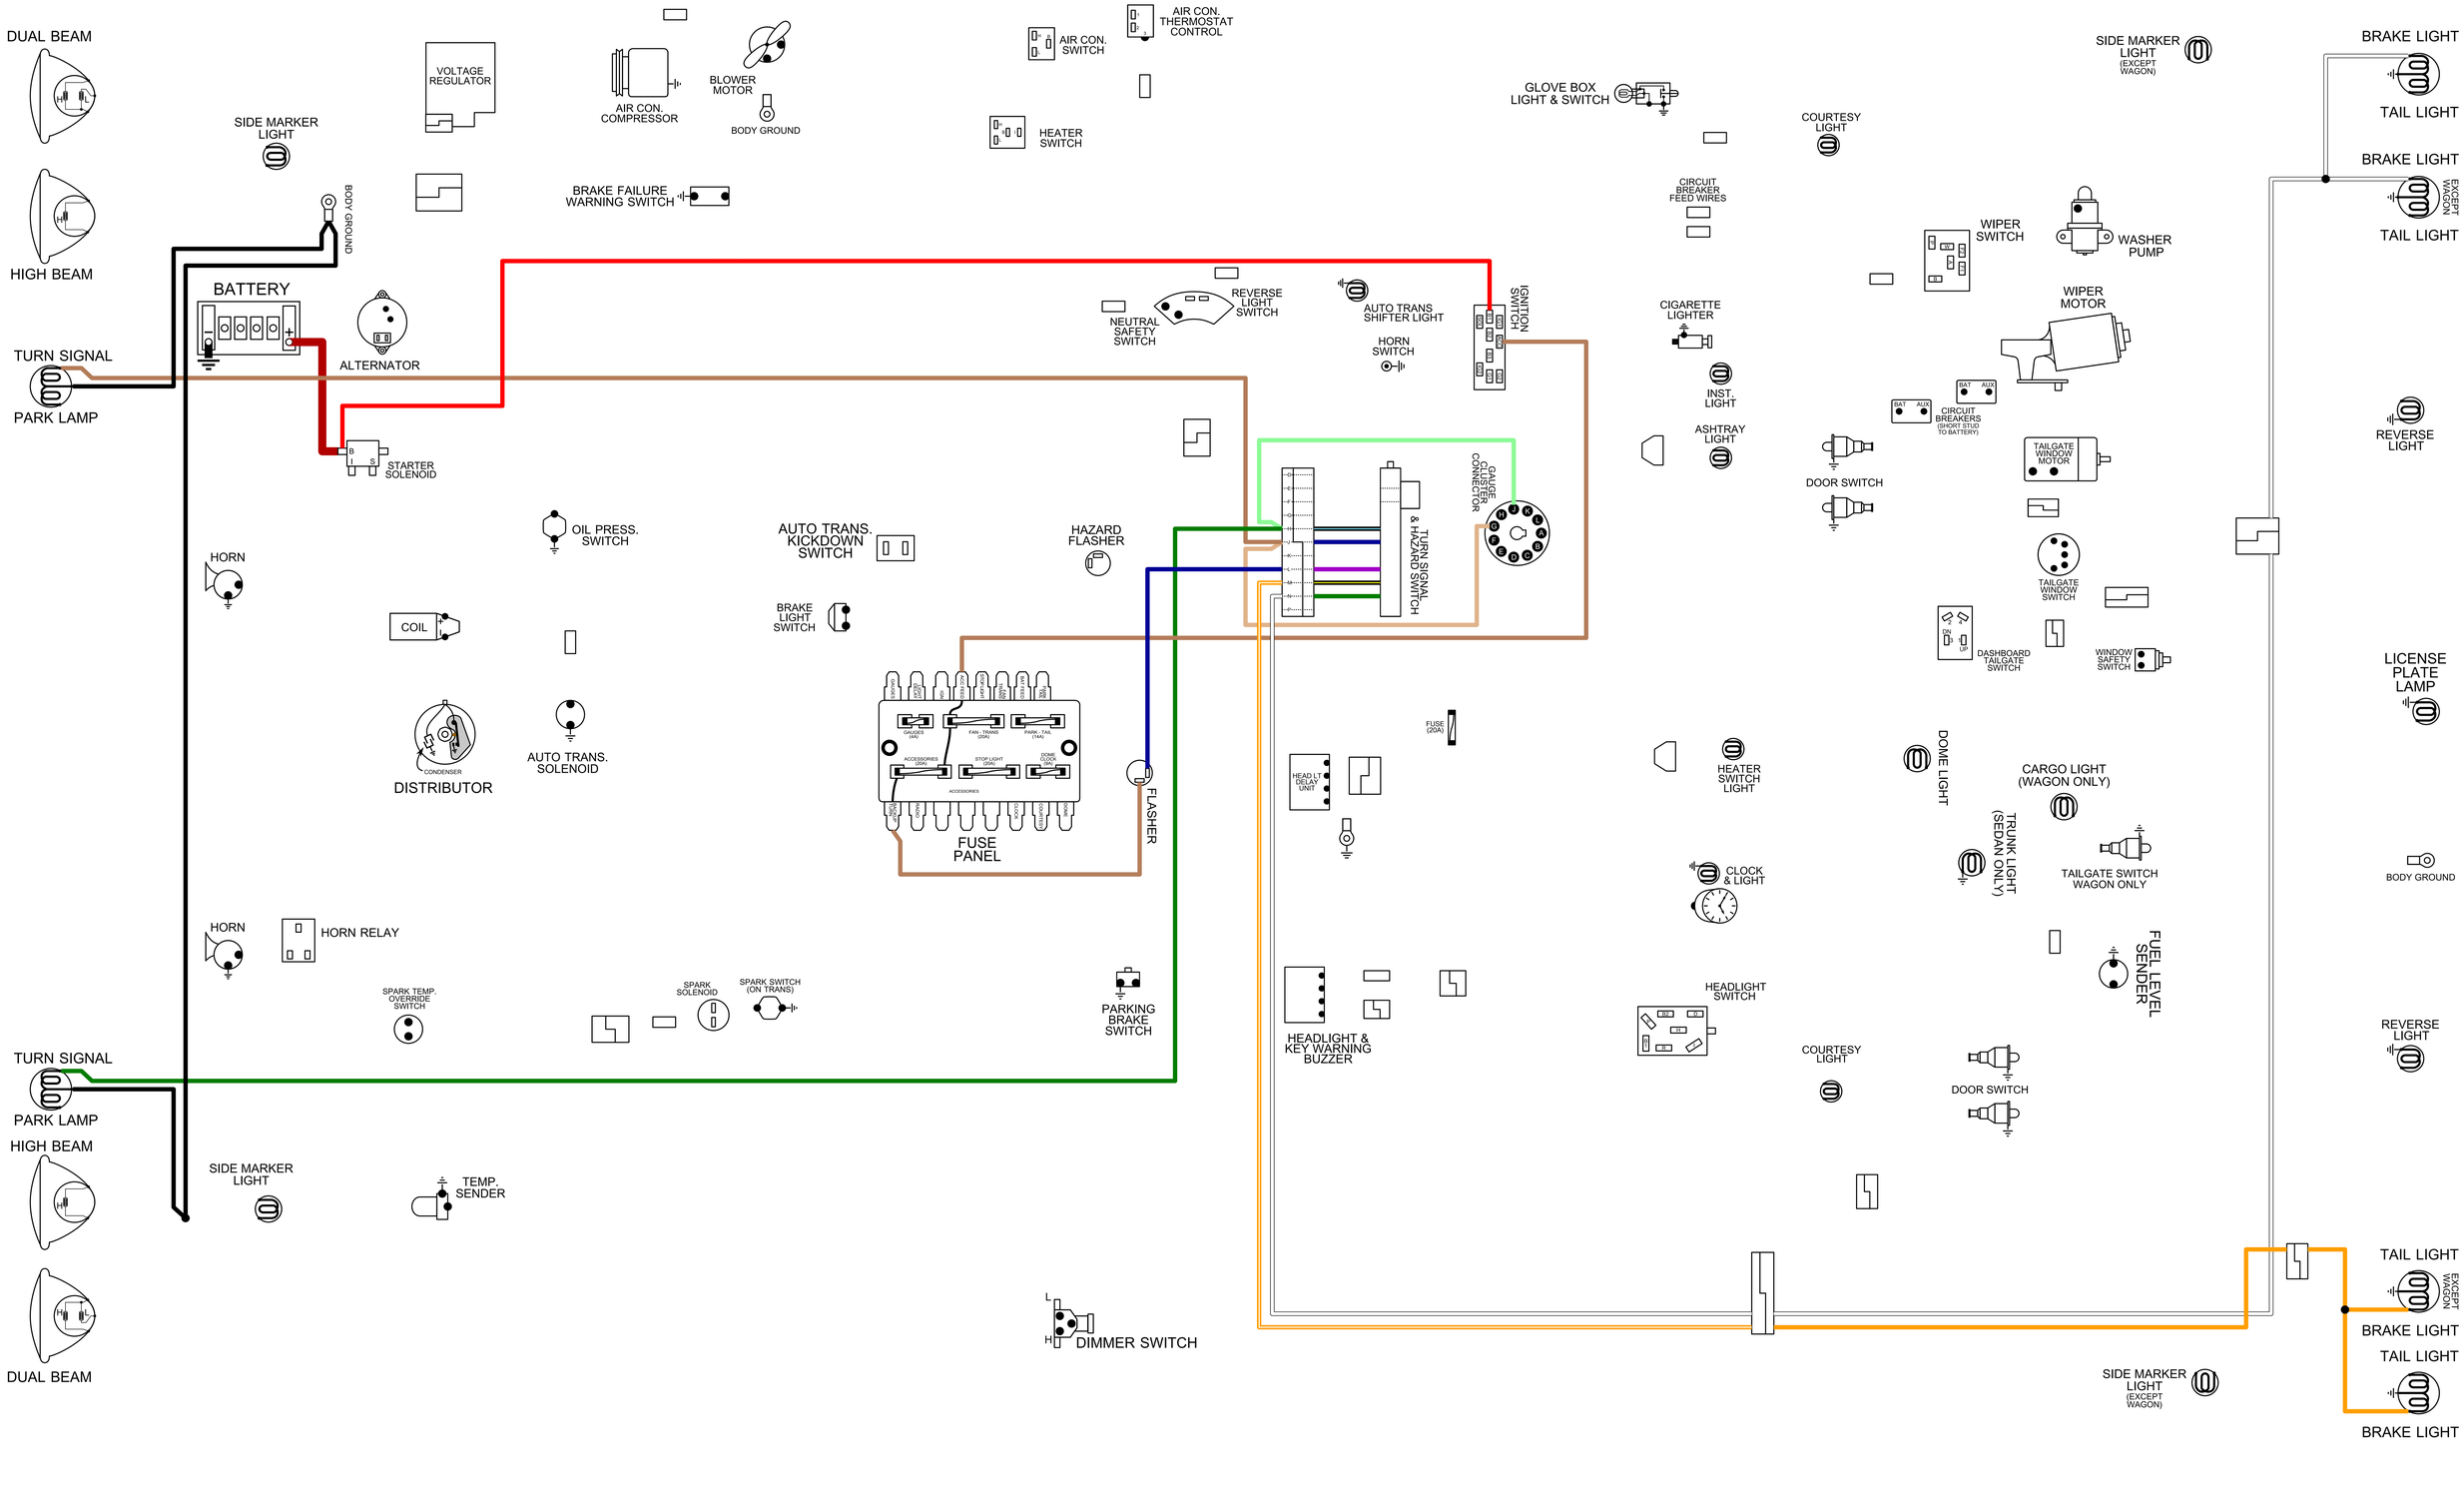


CINCO

1971 AMC AMBASSADOR
HEATER

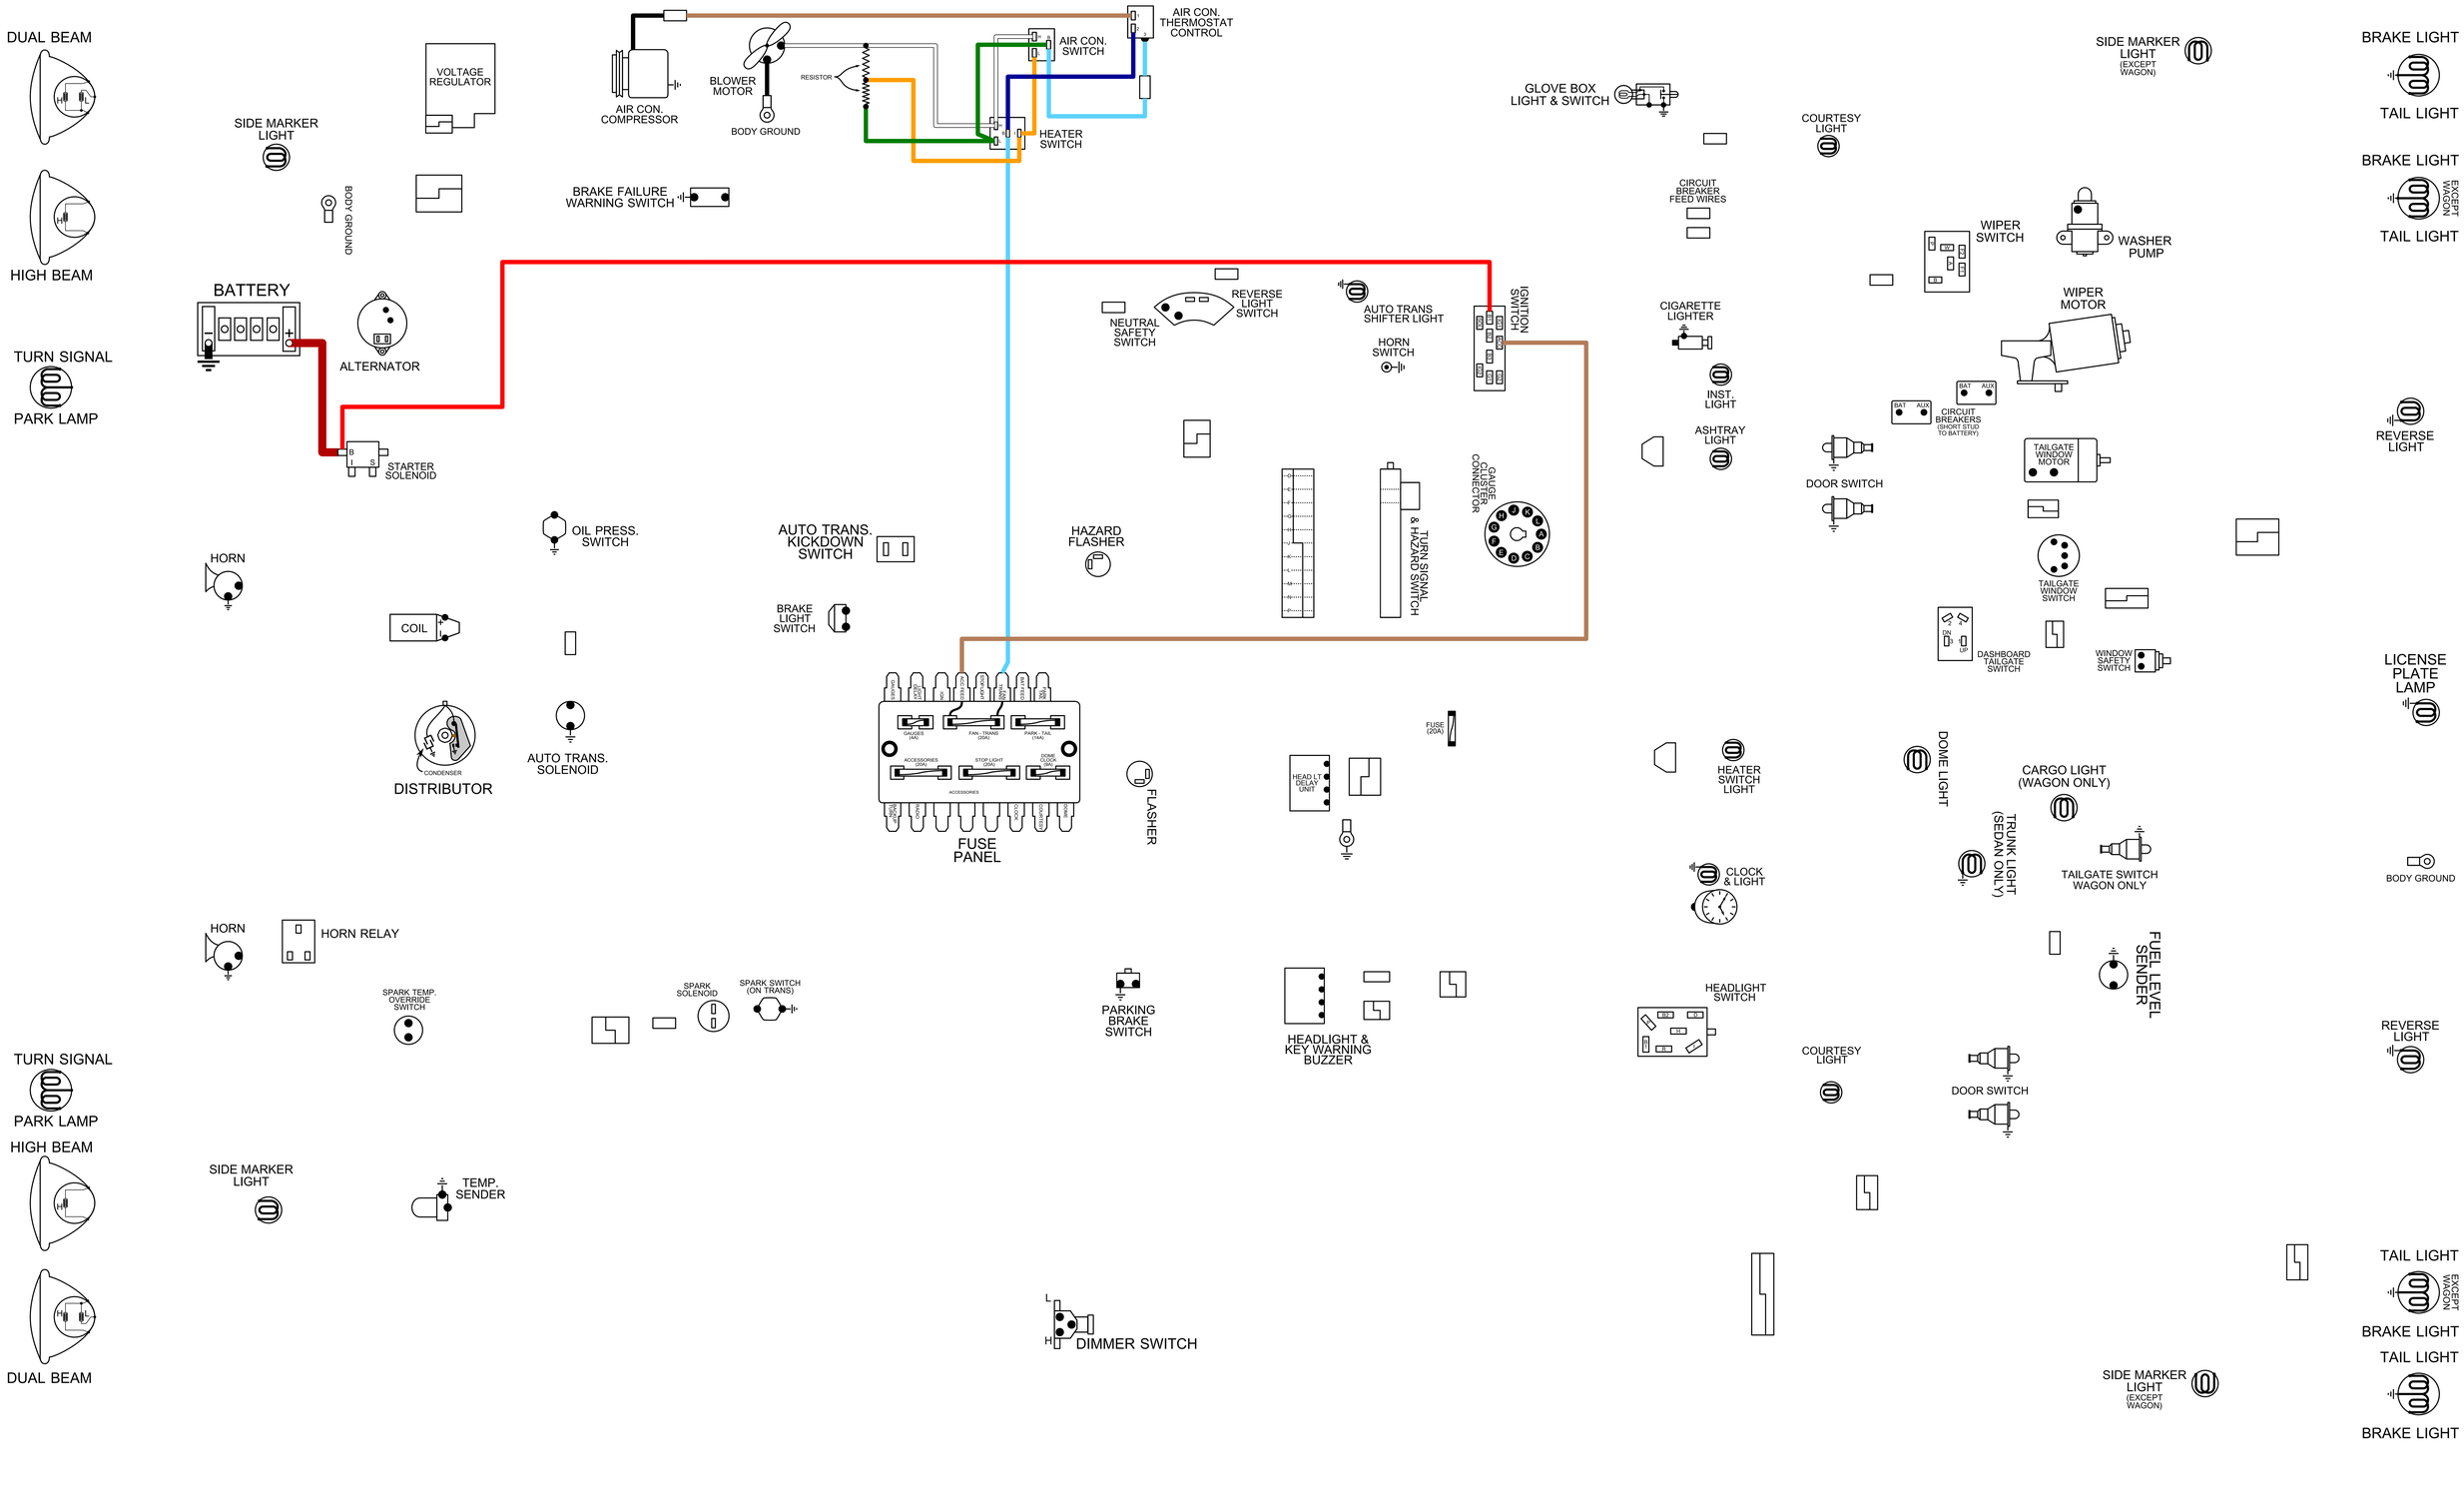


CINCO

1971 AMC AMBASSADOR
HORN

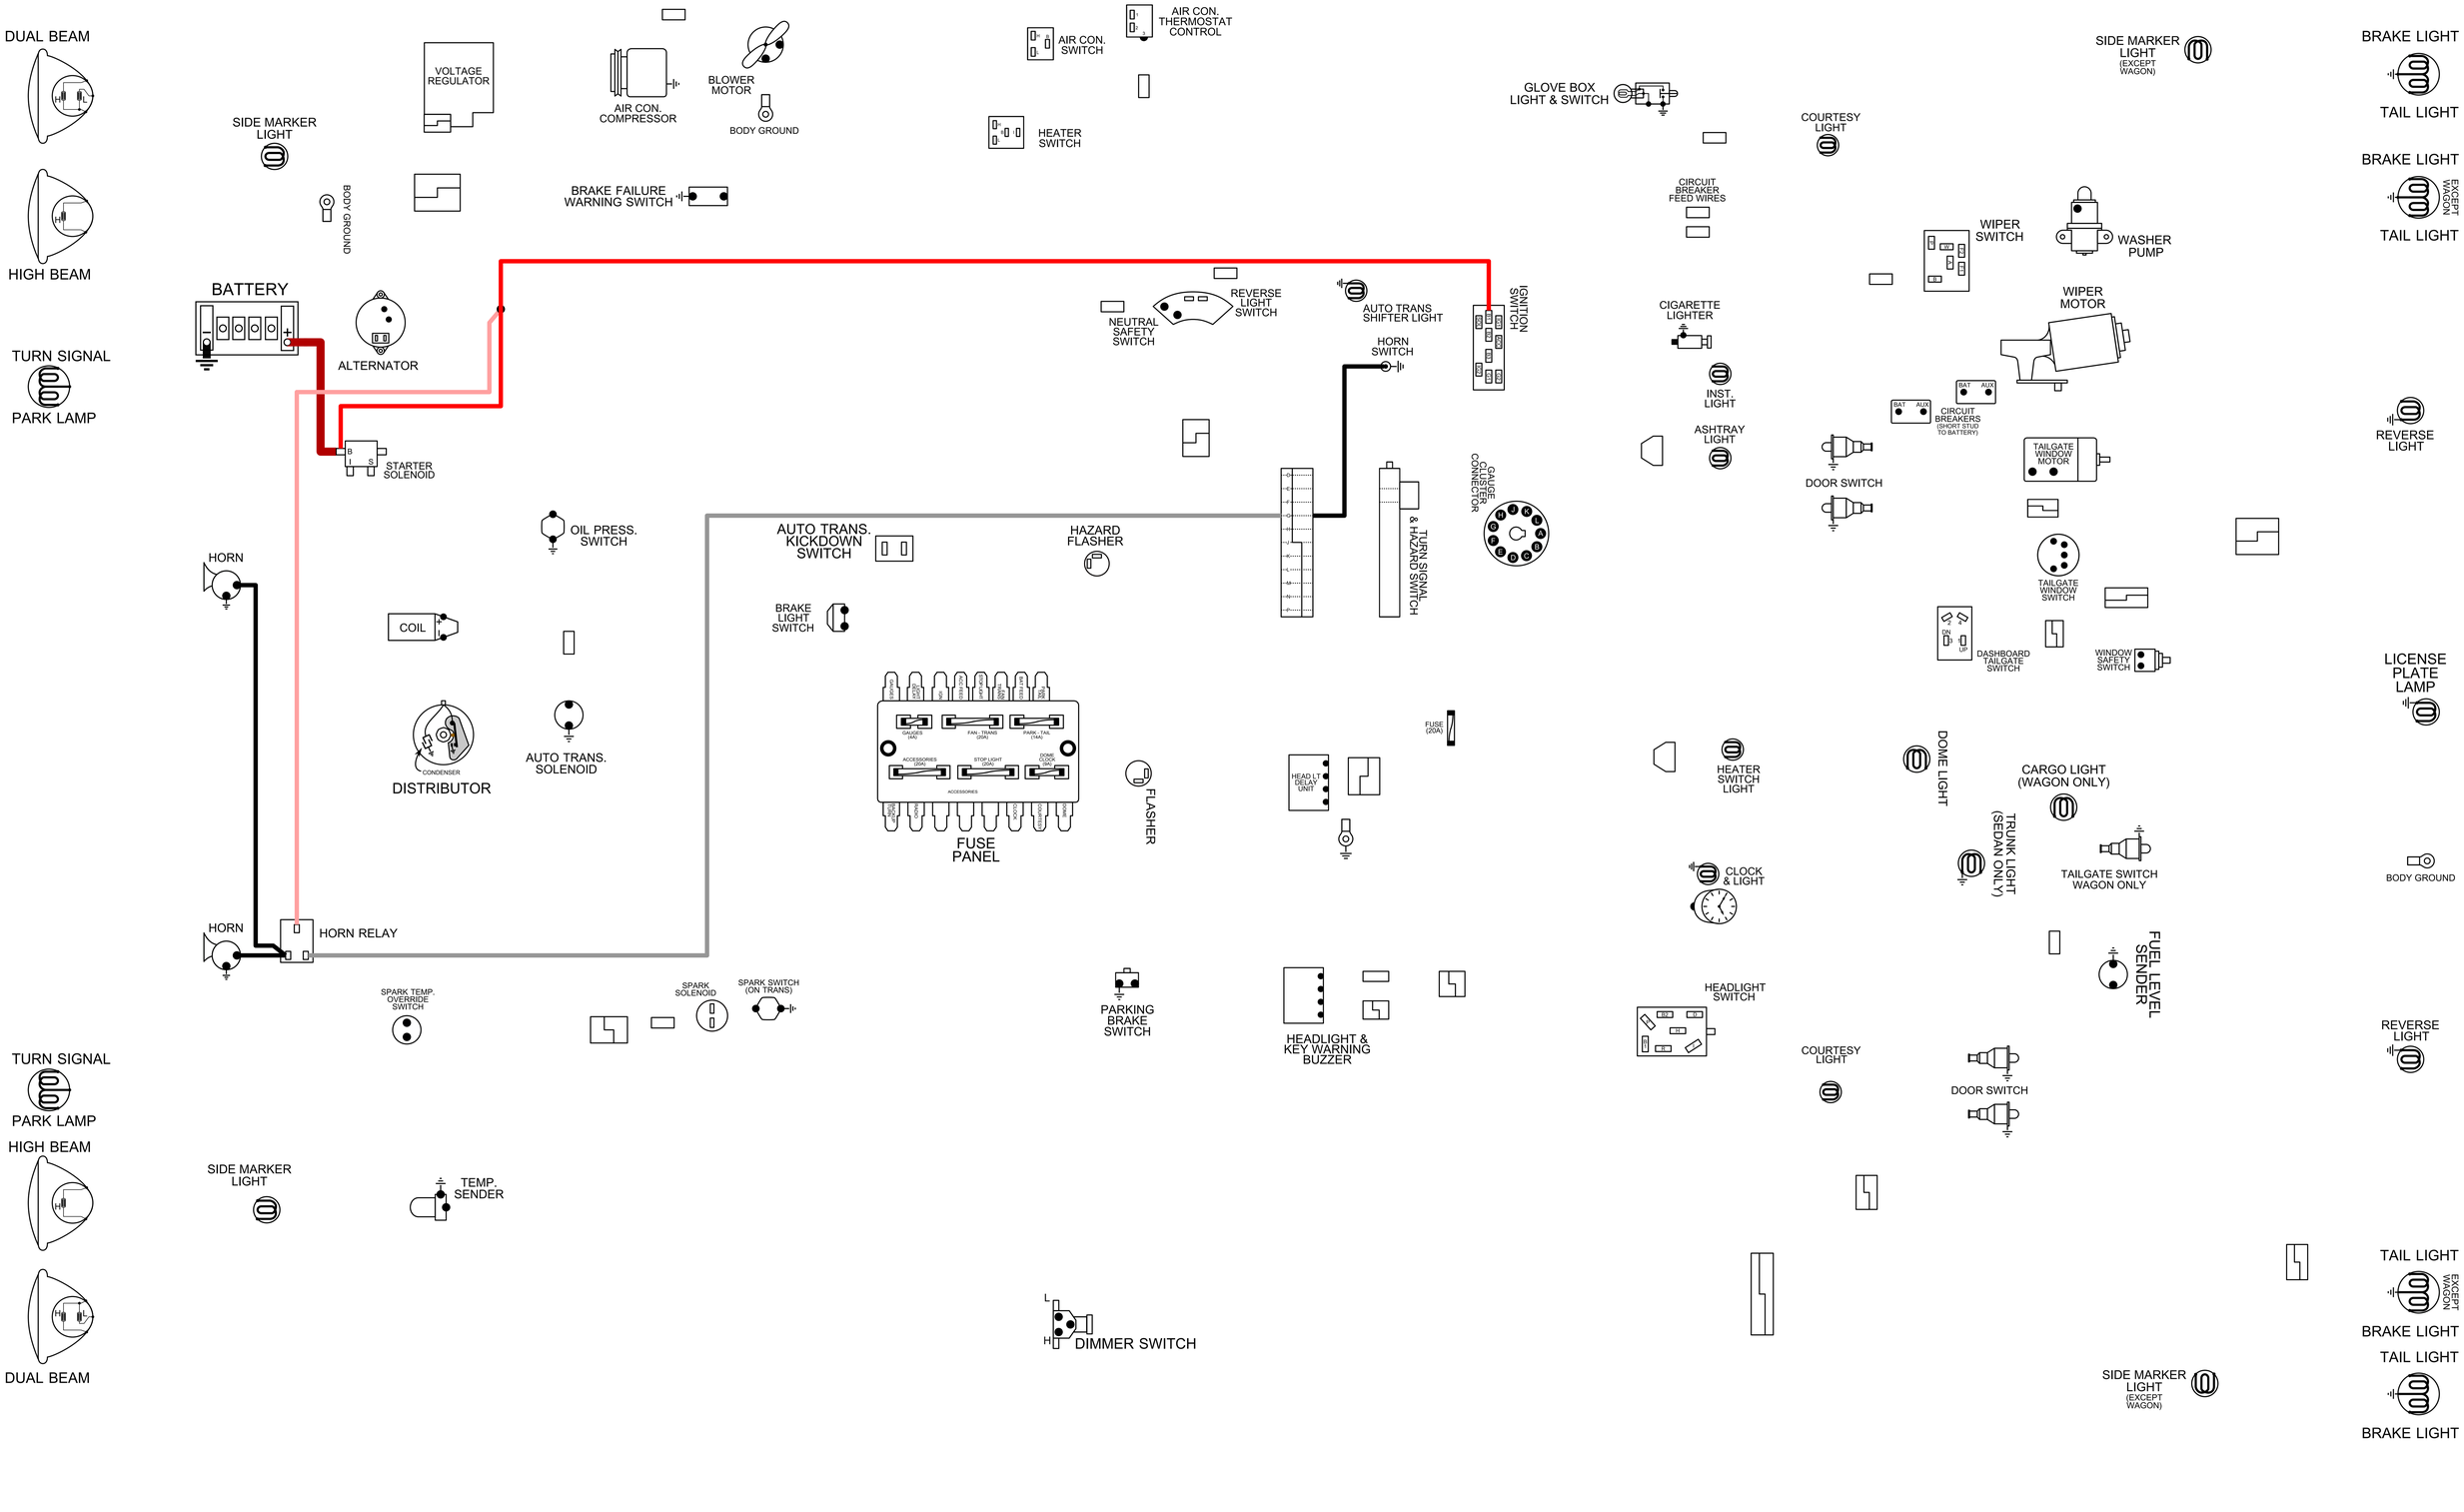


1971 AMC AMBASSADOR
TRANSMISSION

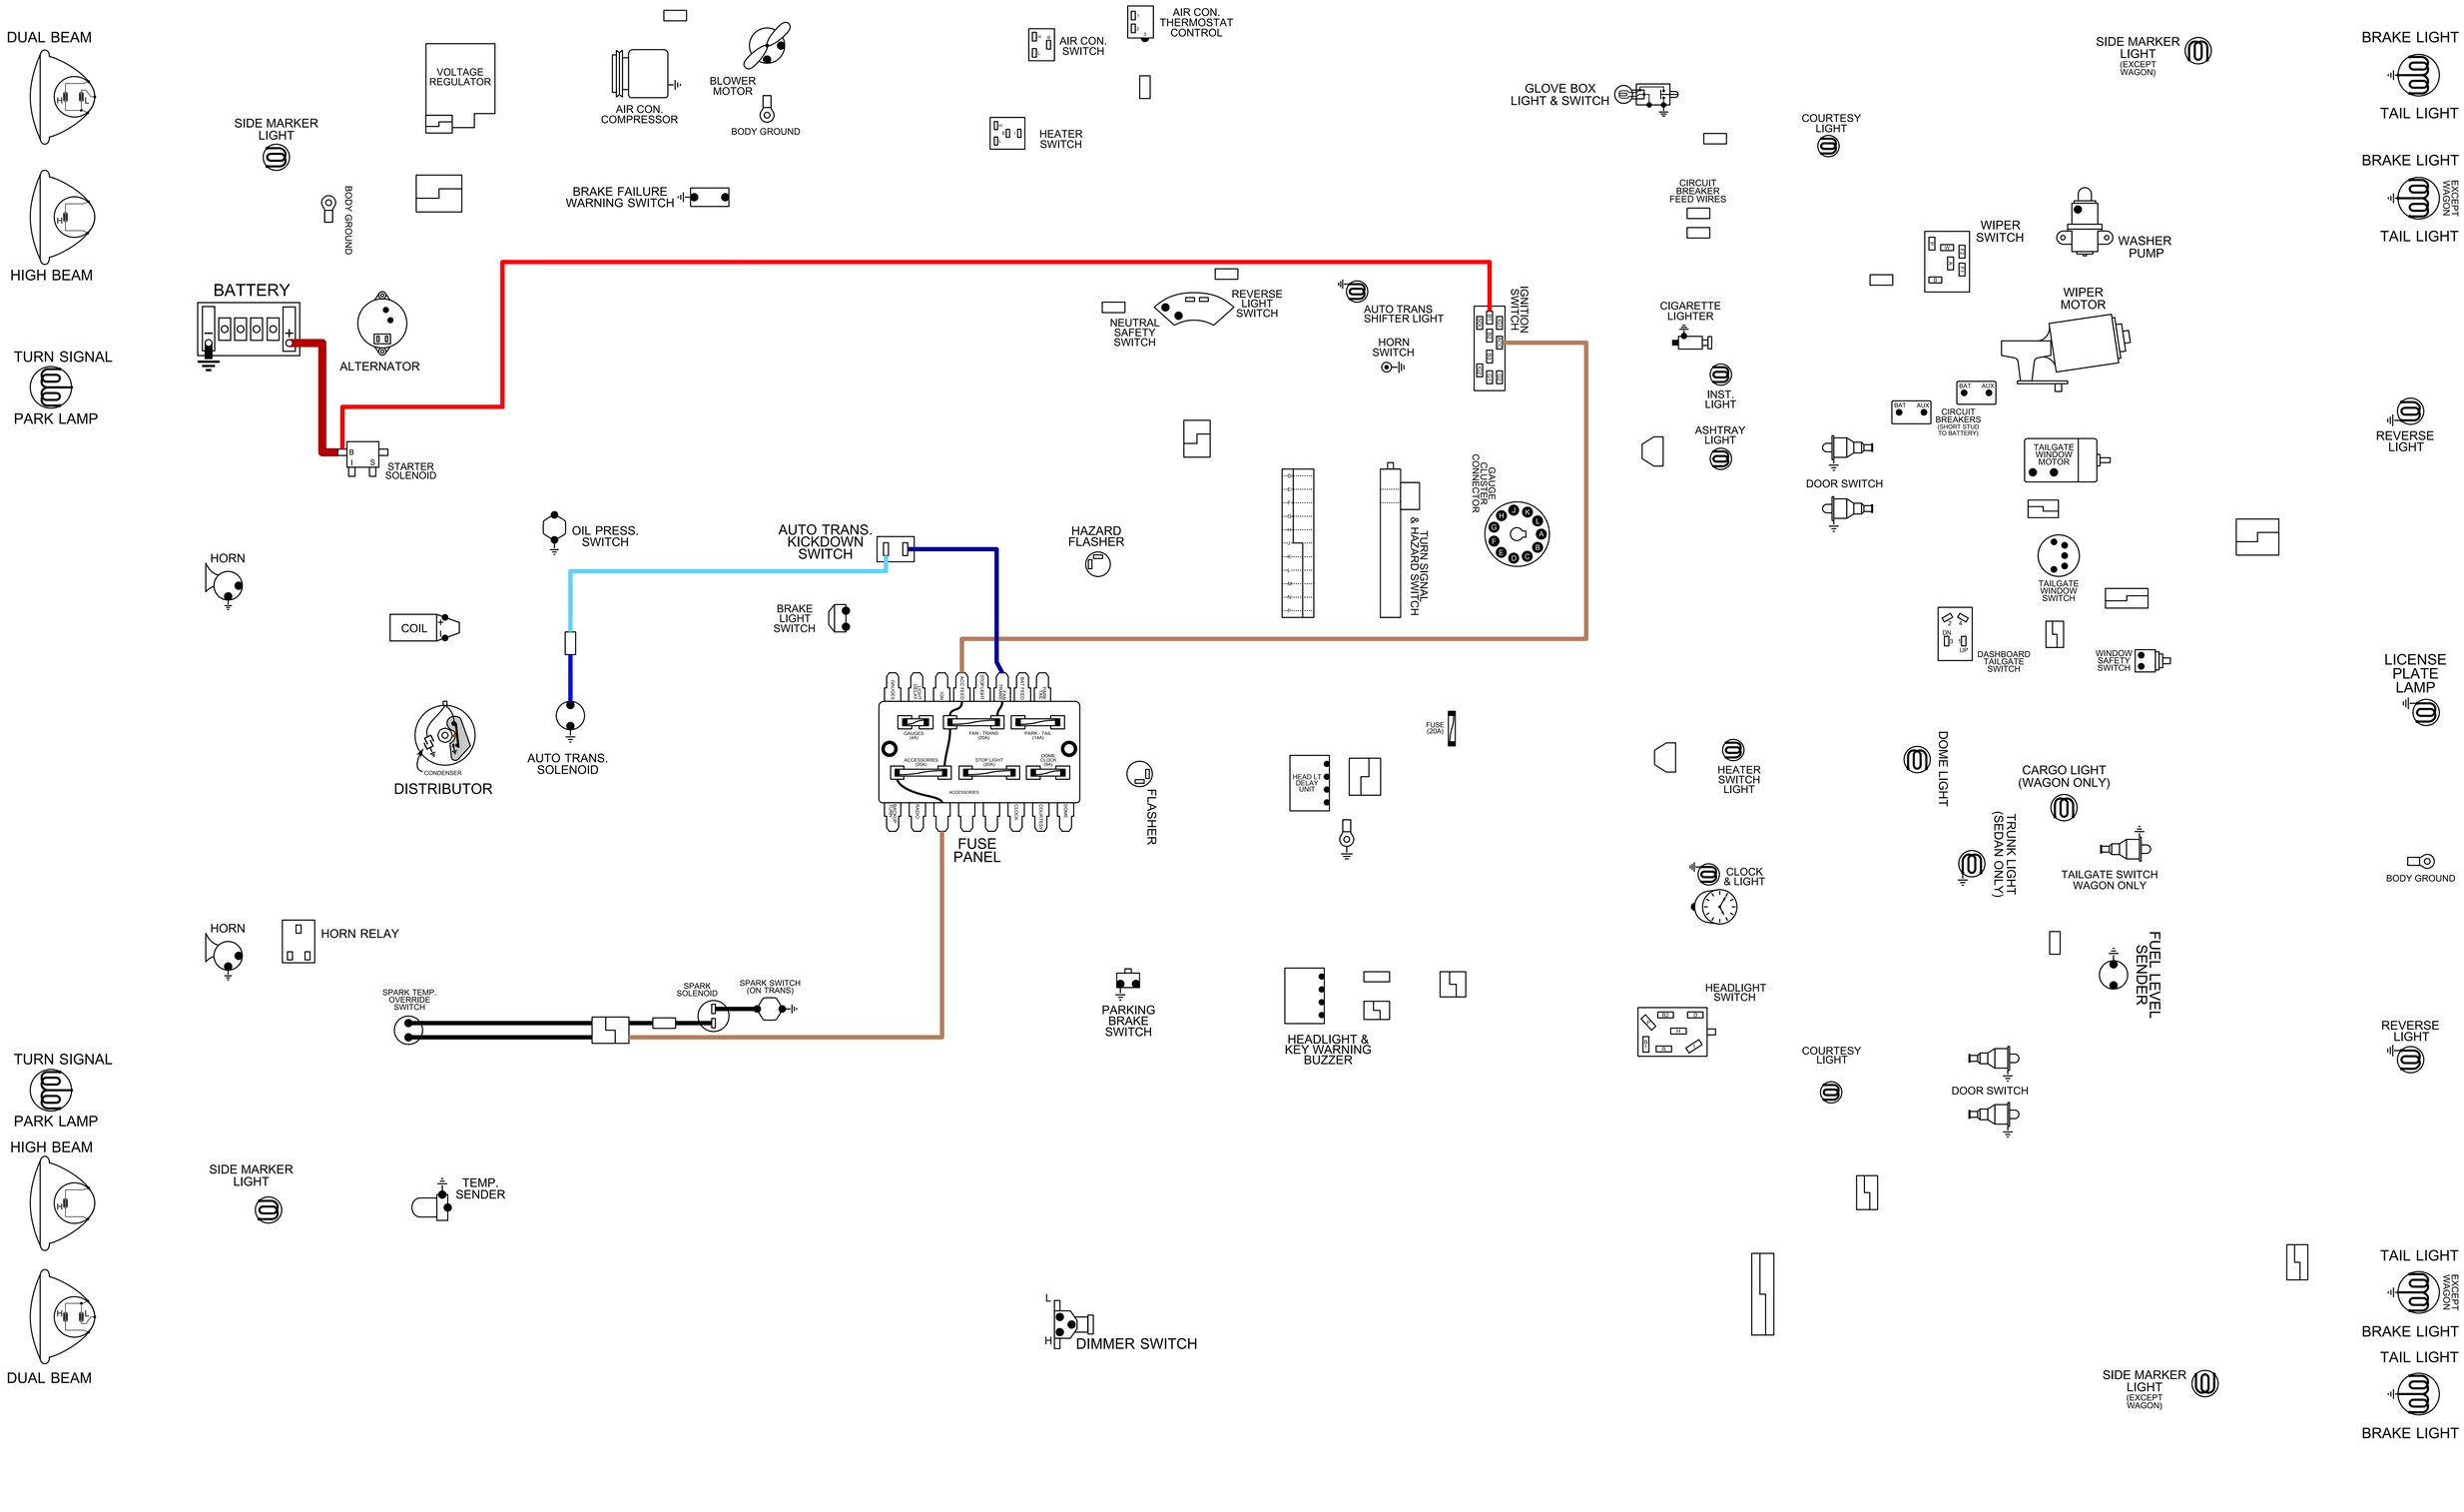


1971 AMC AMBASSADOR

WIPERS

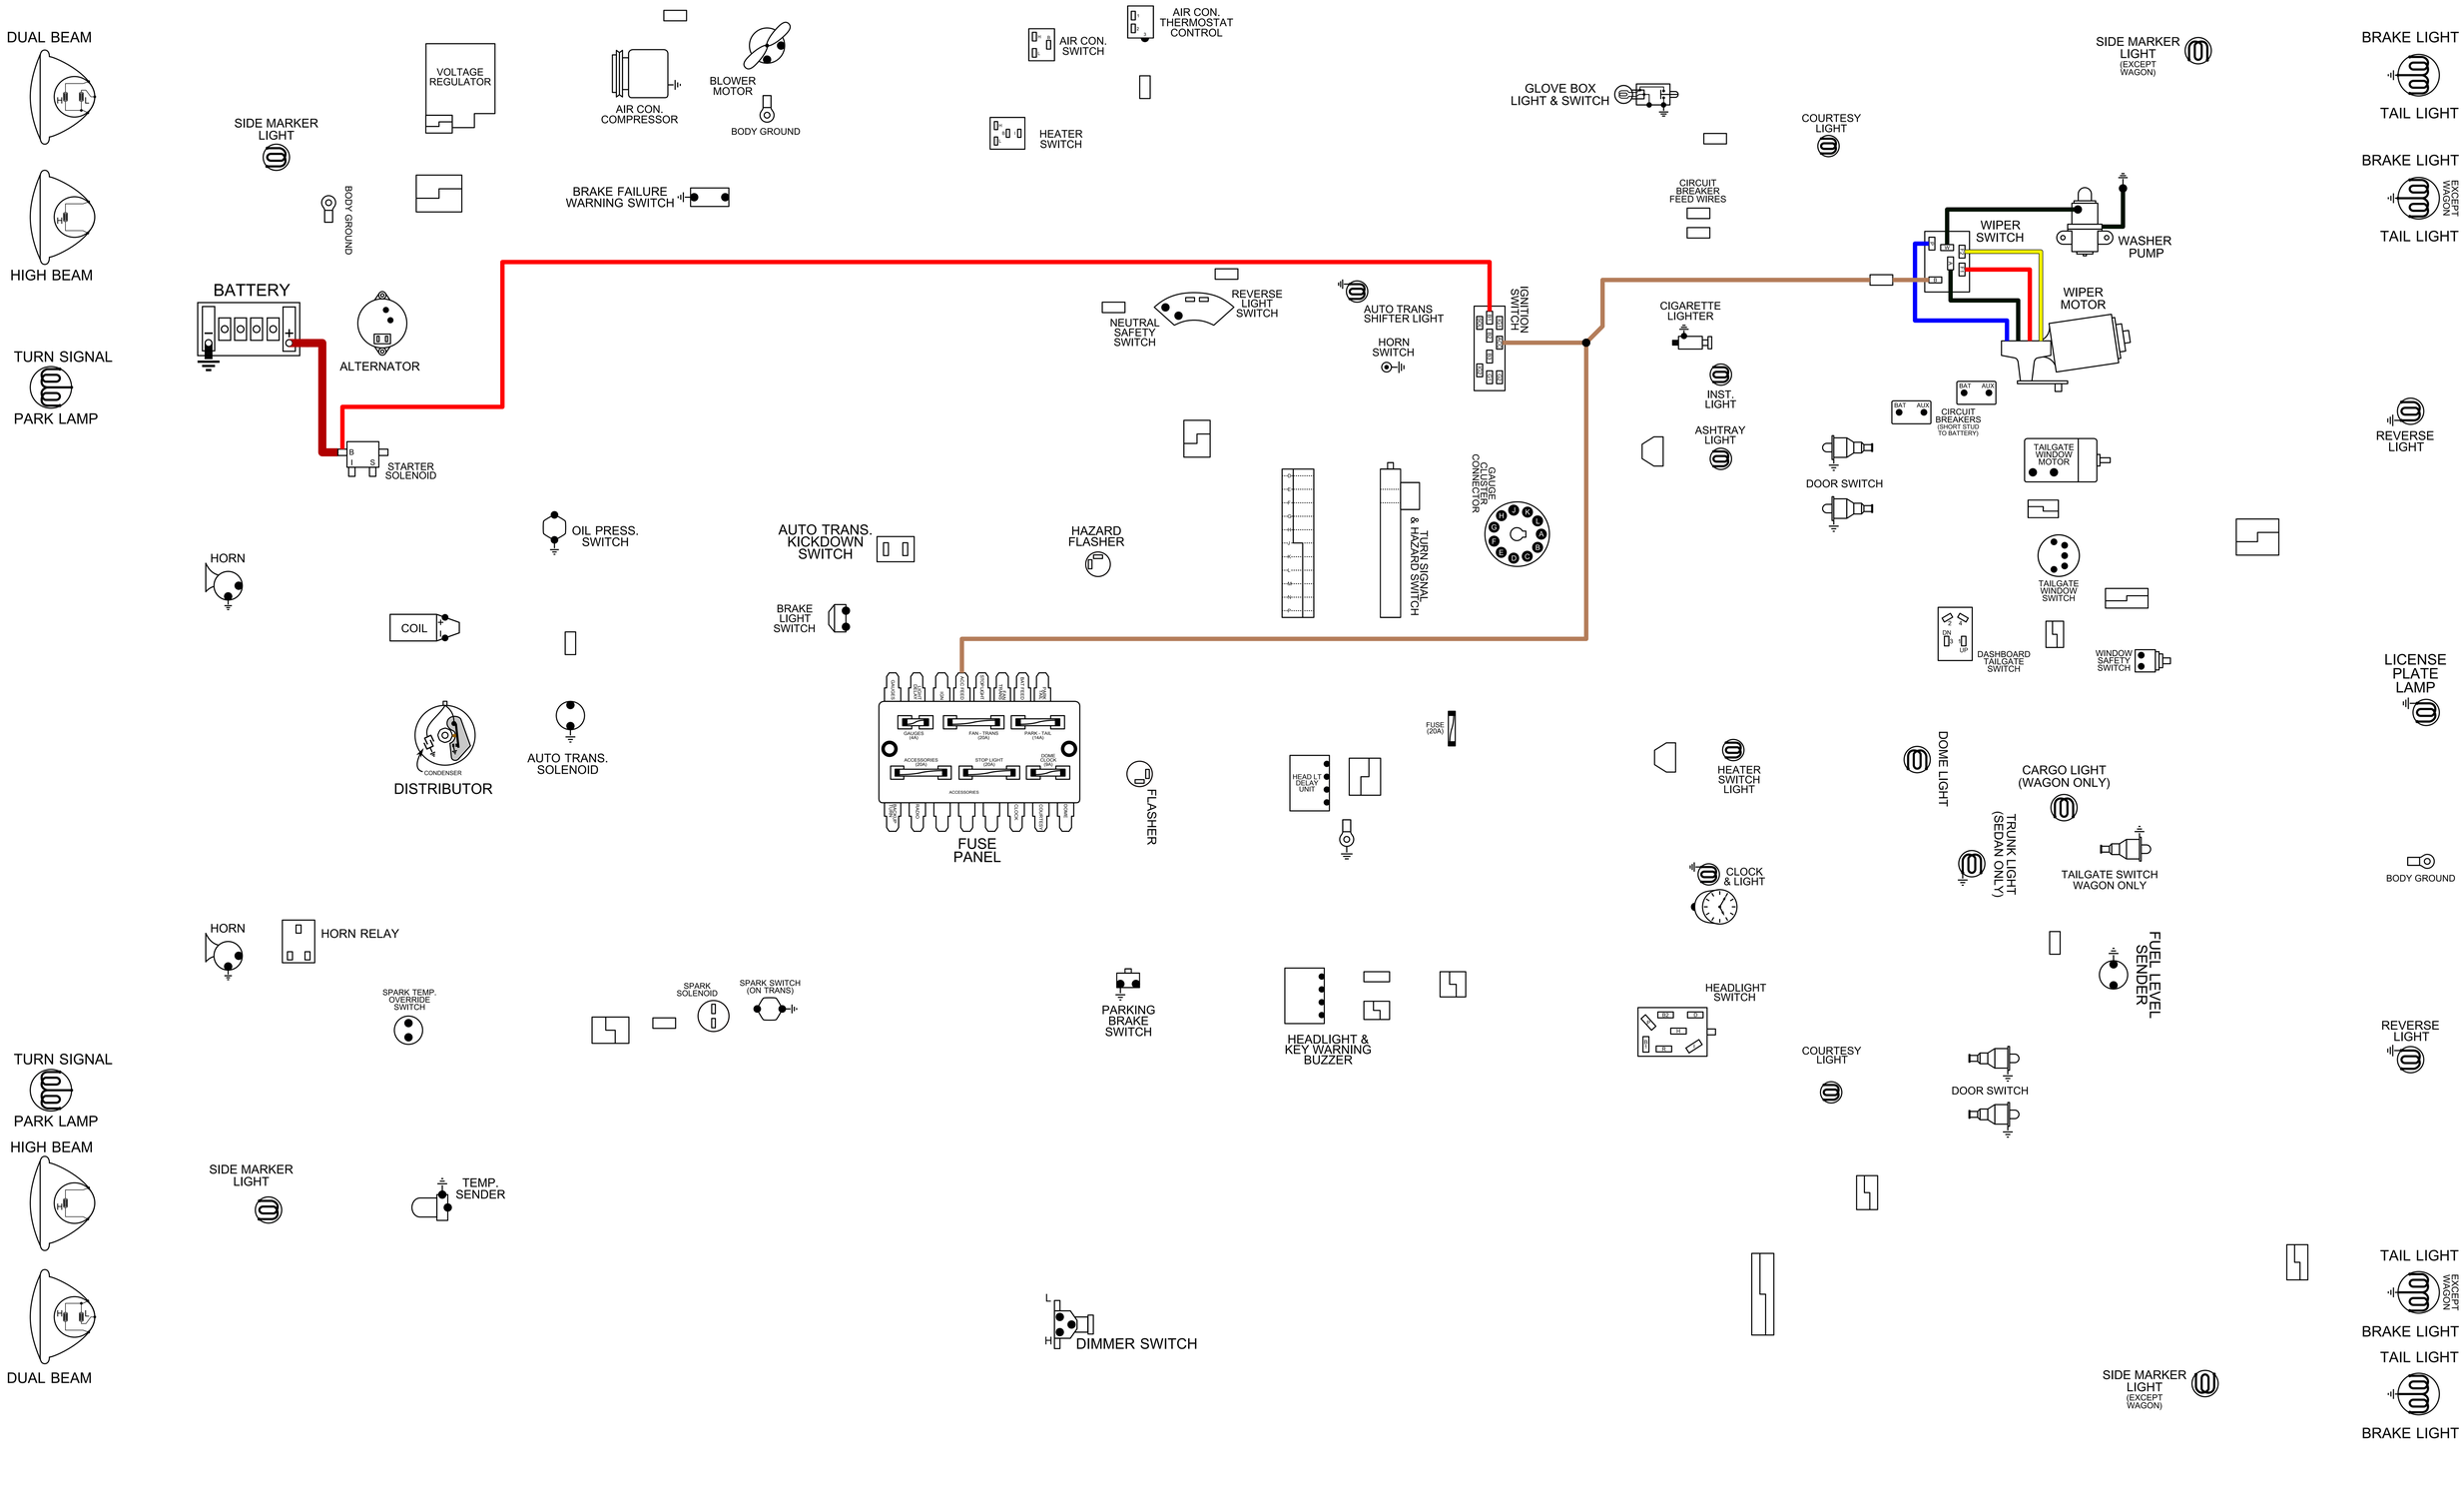


CINCO

1971 AMC AMBASSADOR
TAILGATE WINDOW

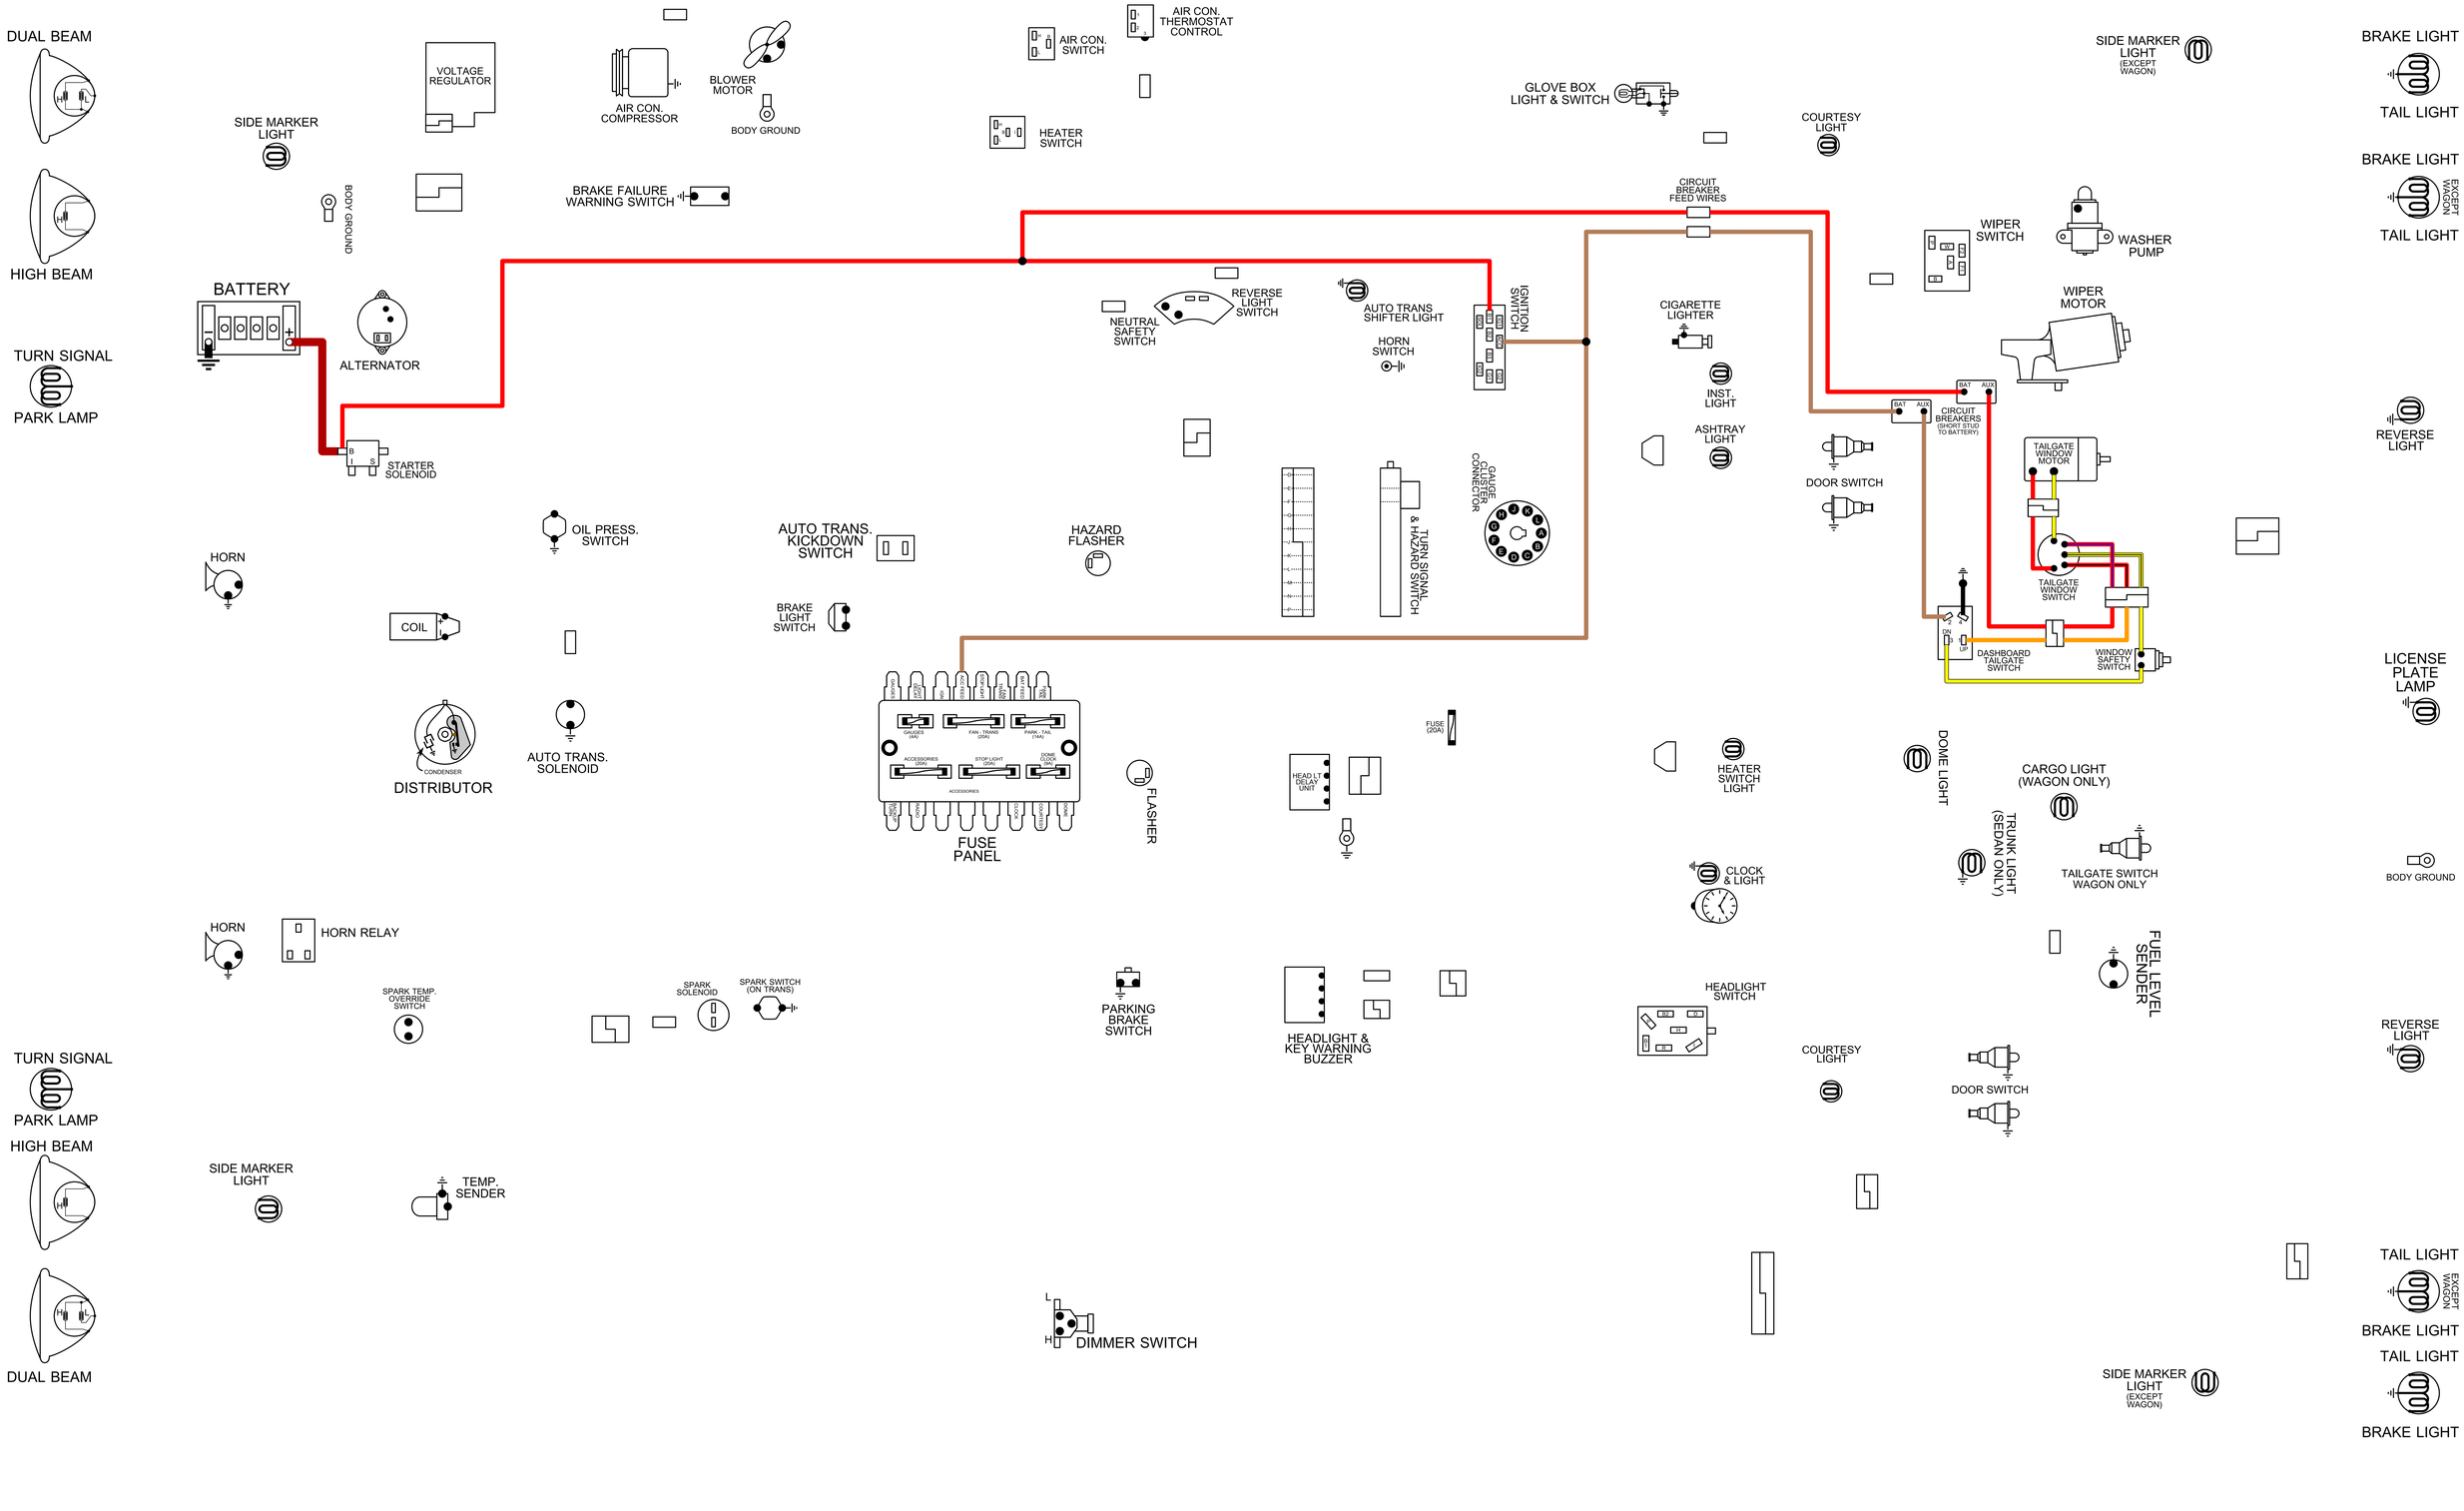


CINCO

1971 AMC AMBASSADOR
GAUGES & WARNING LIGHTS

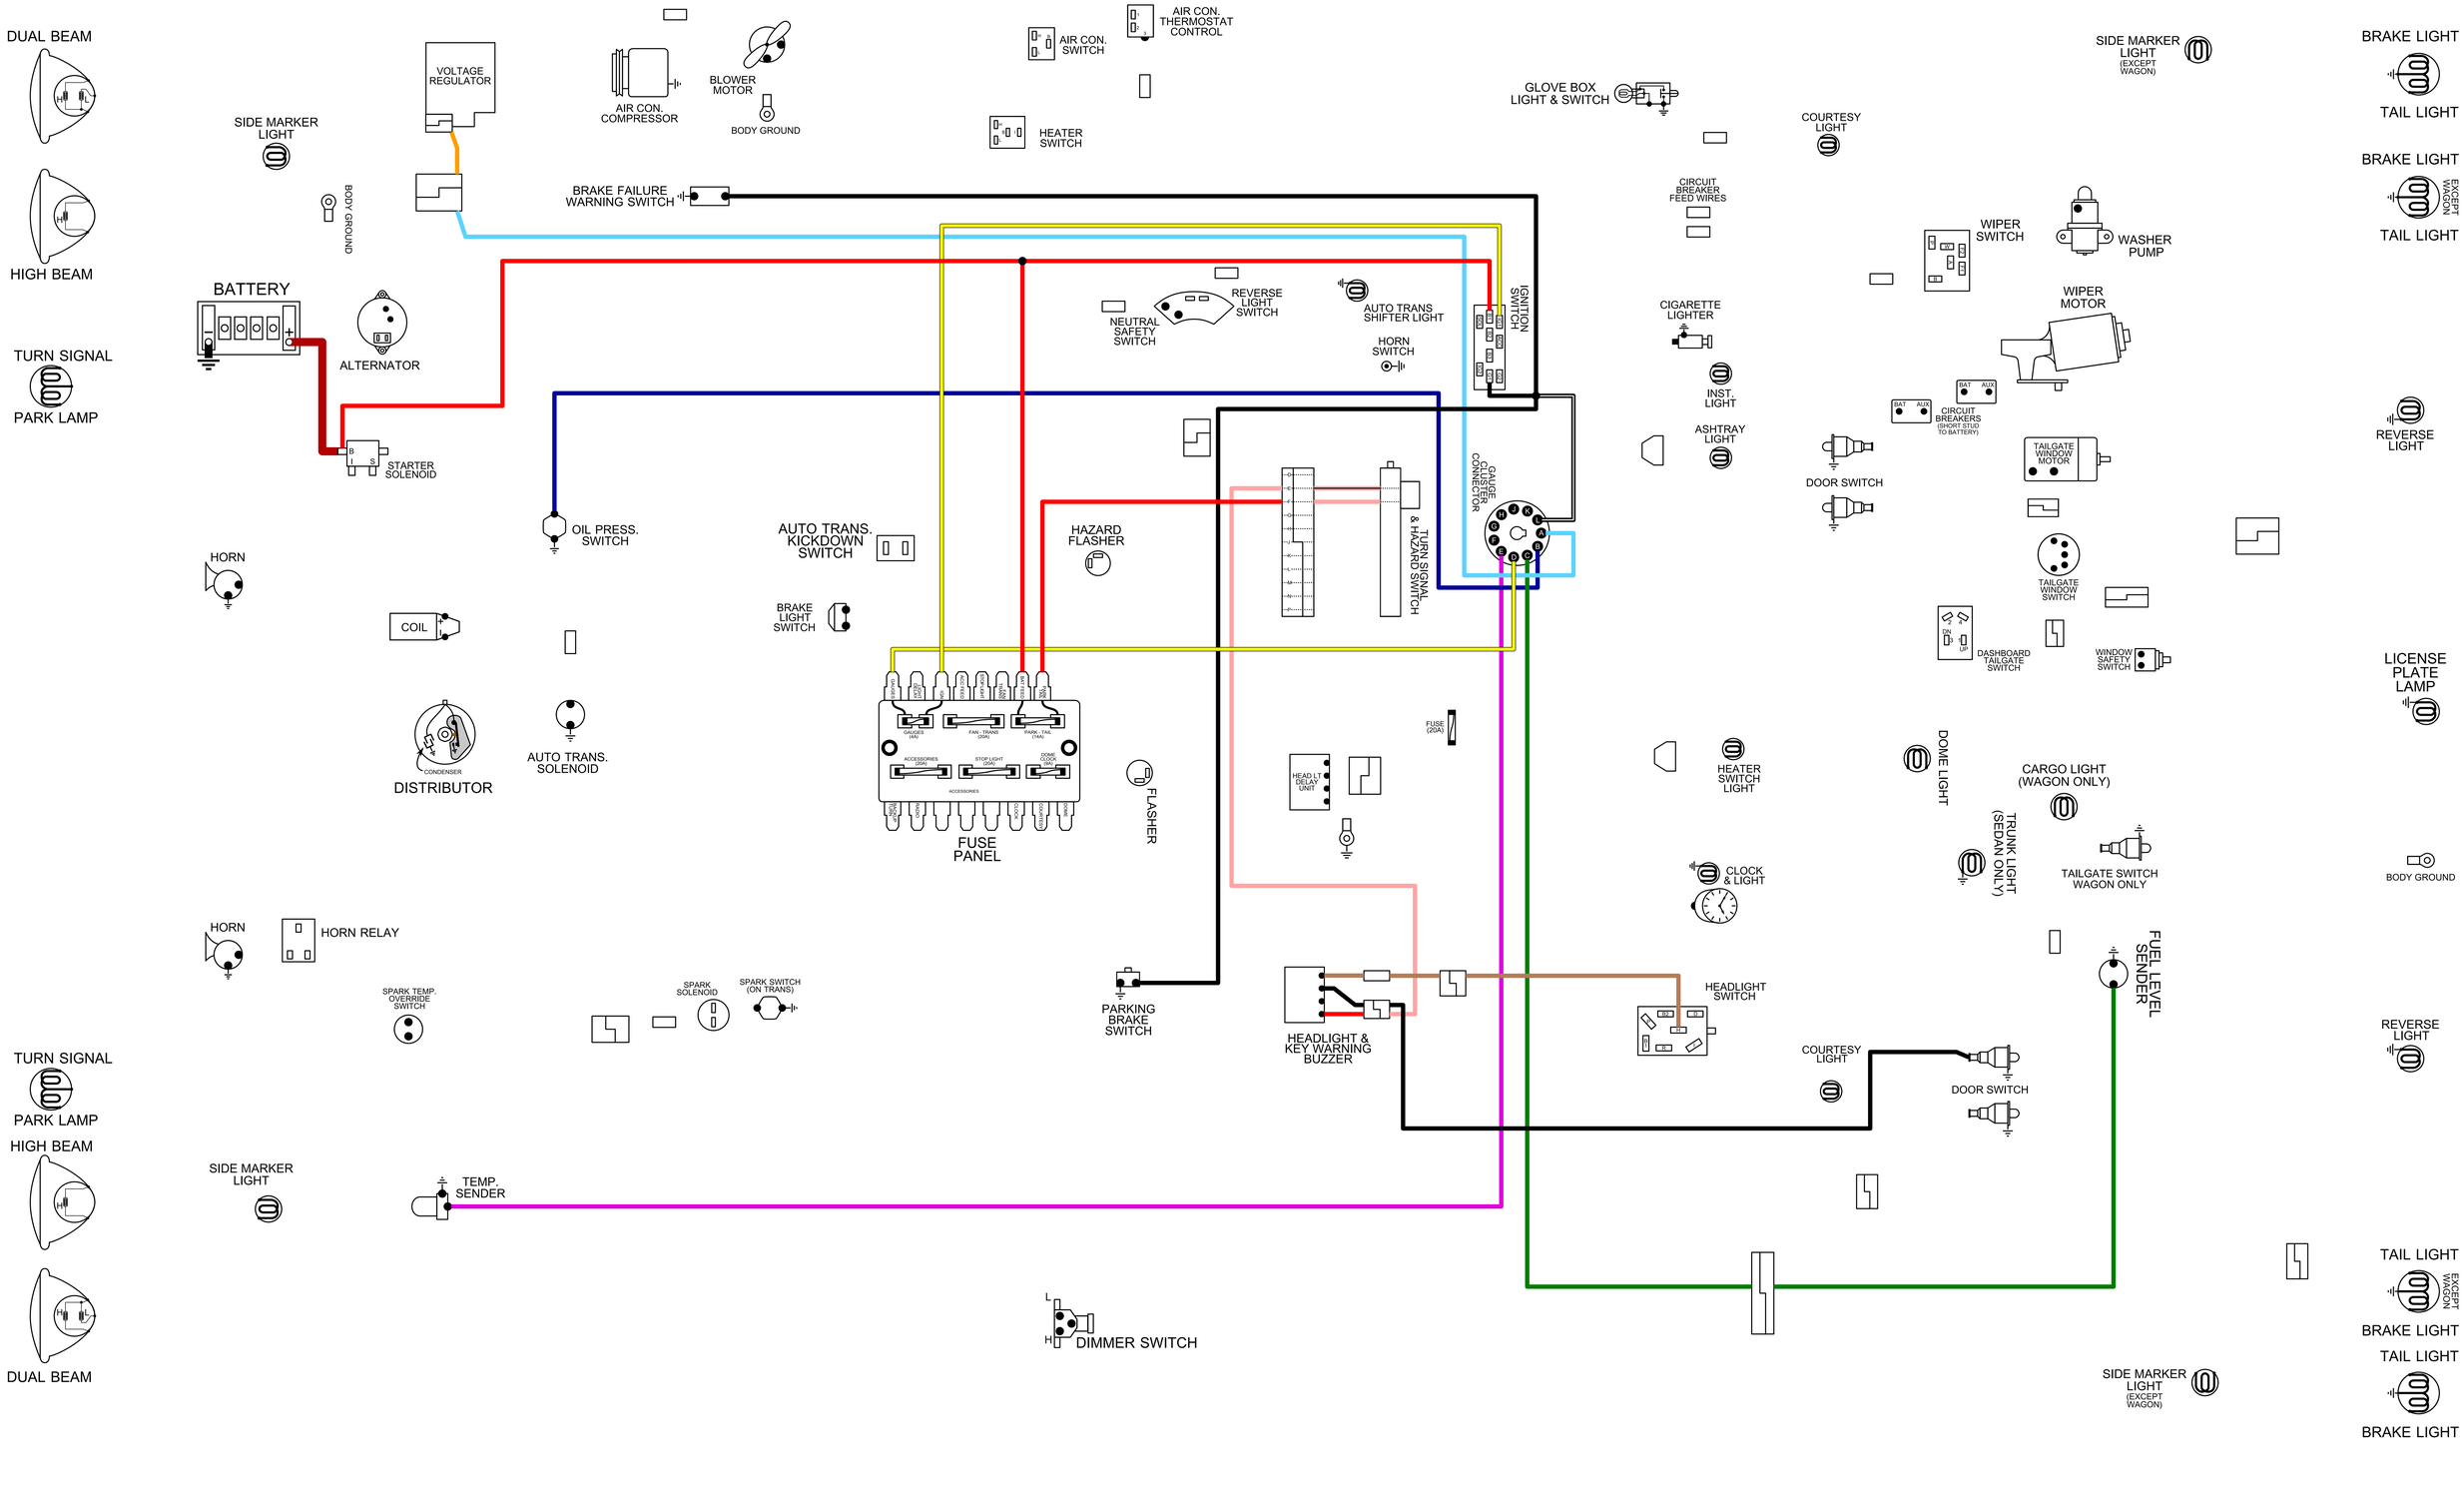


CINCO

1971 AMC AMBASSADOR
REVERSE LIGHTS

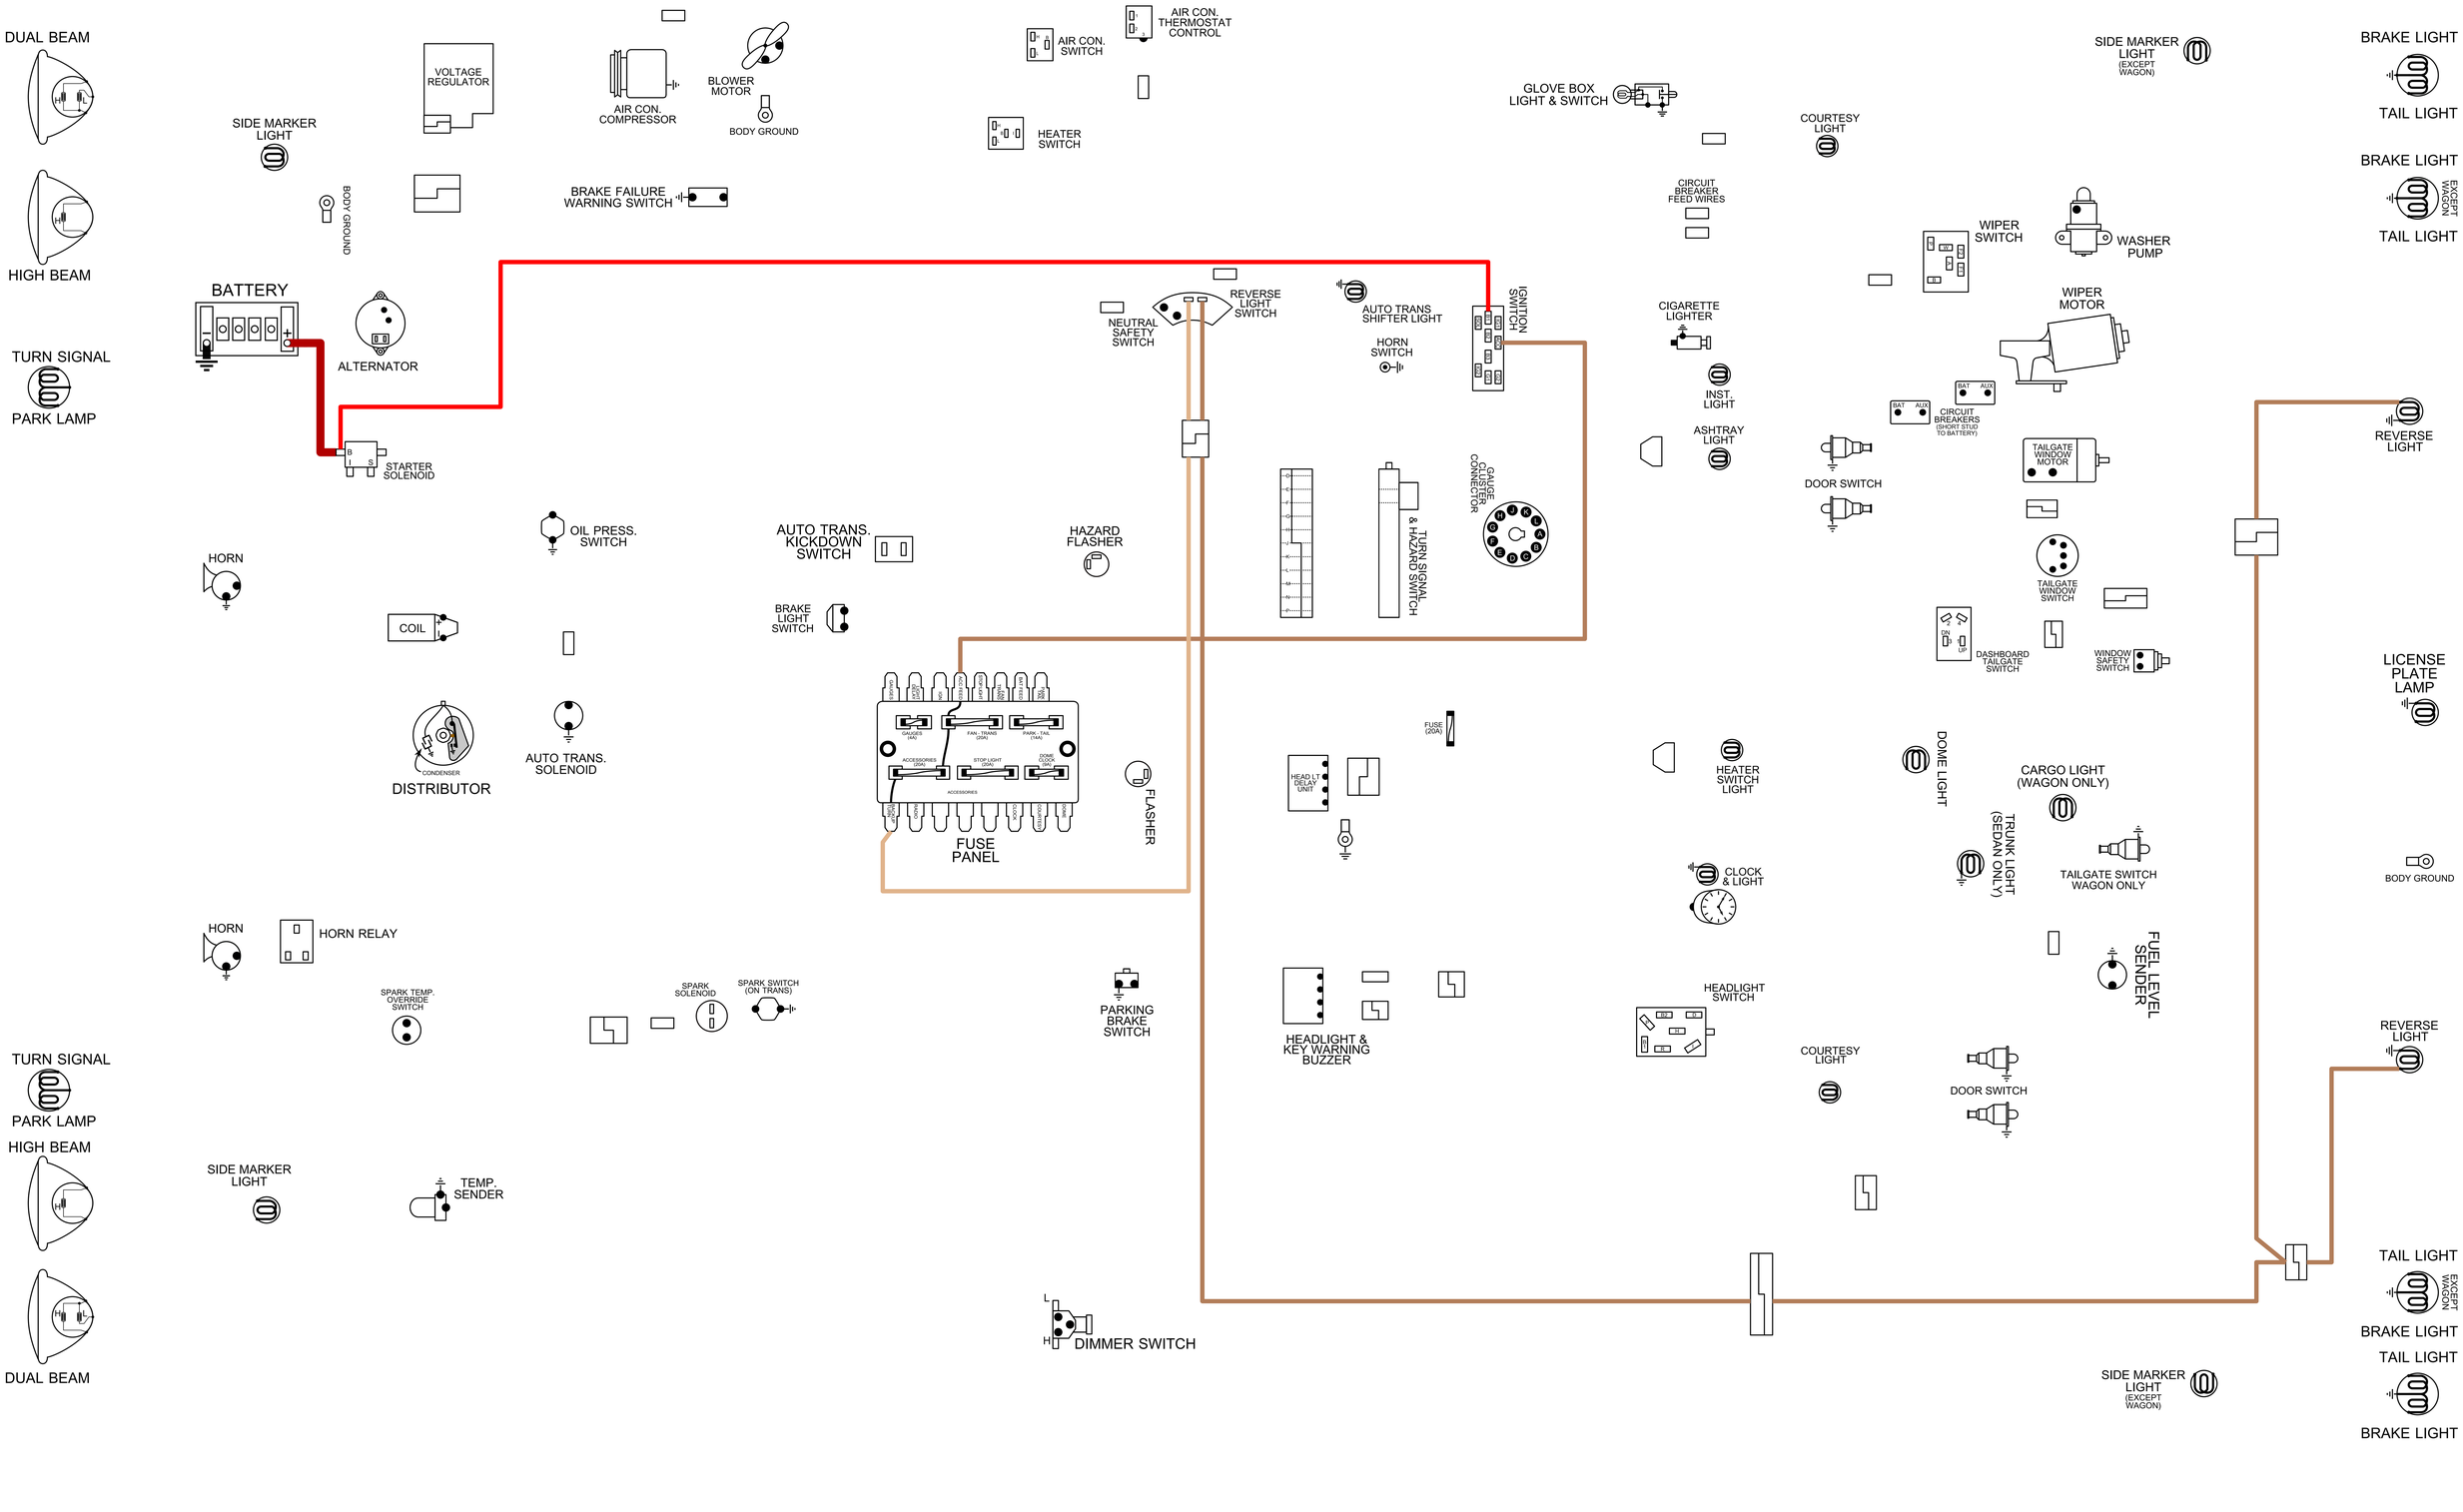


CINCO

1971 AMC AMBASSADOR
DOME & COURTESY LIGHTS

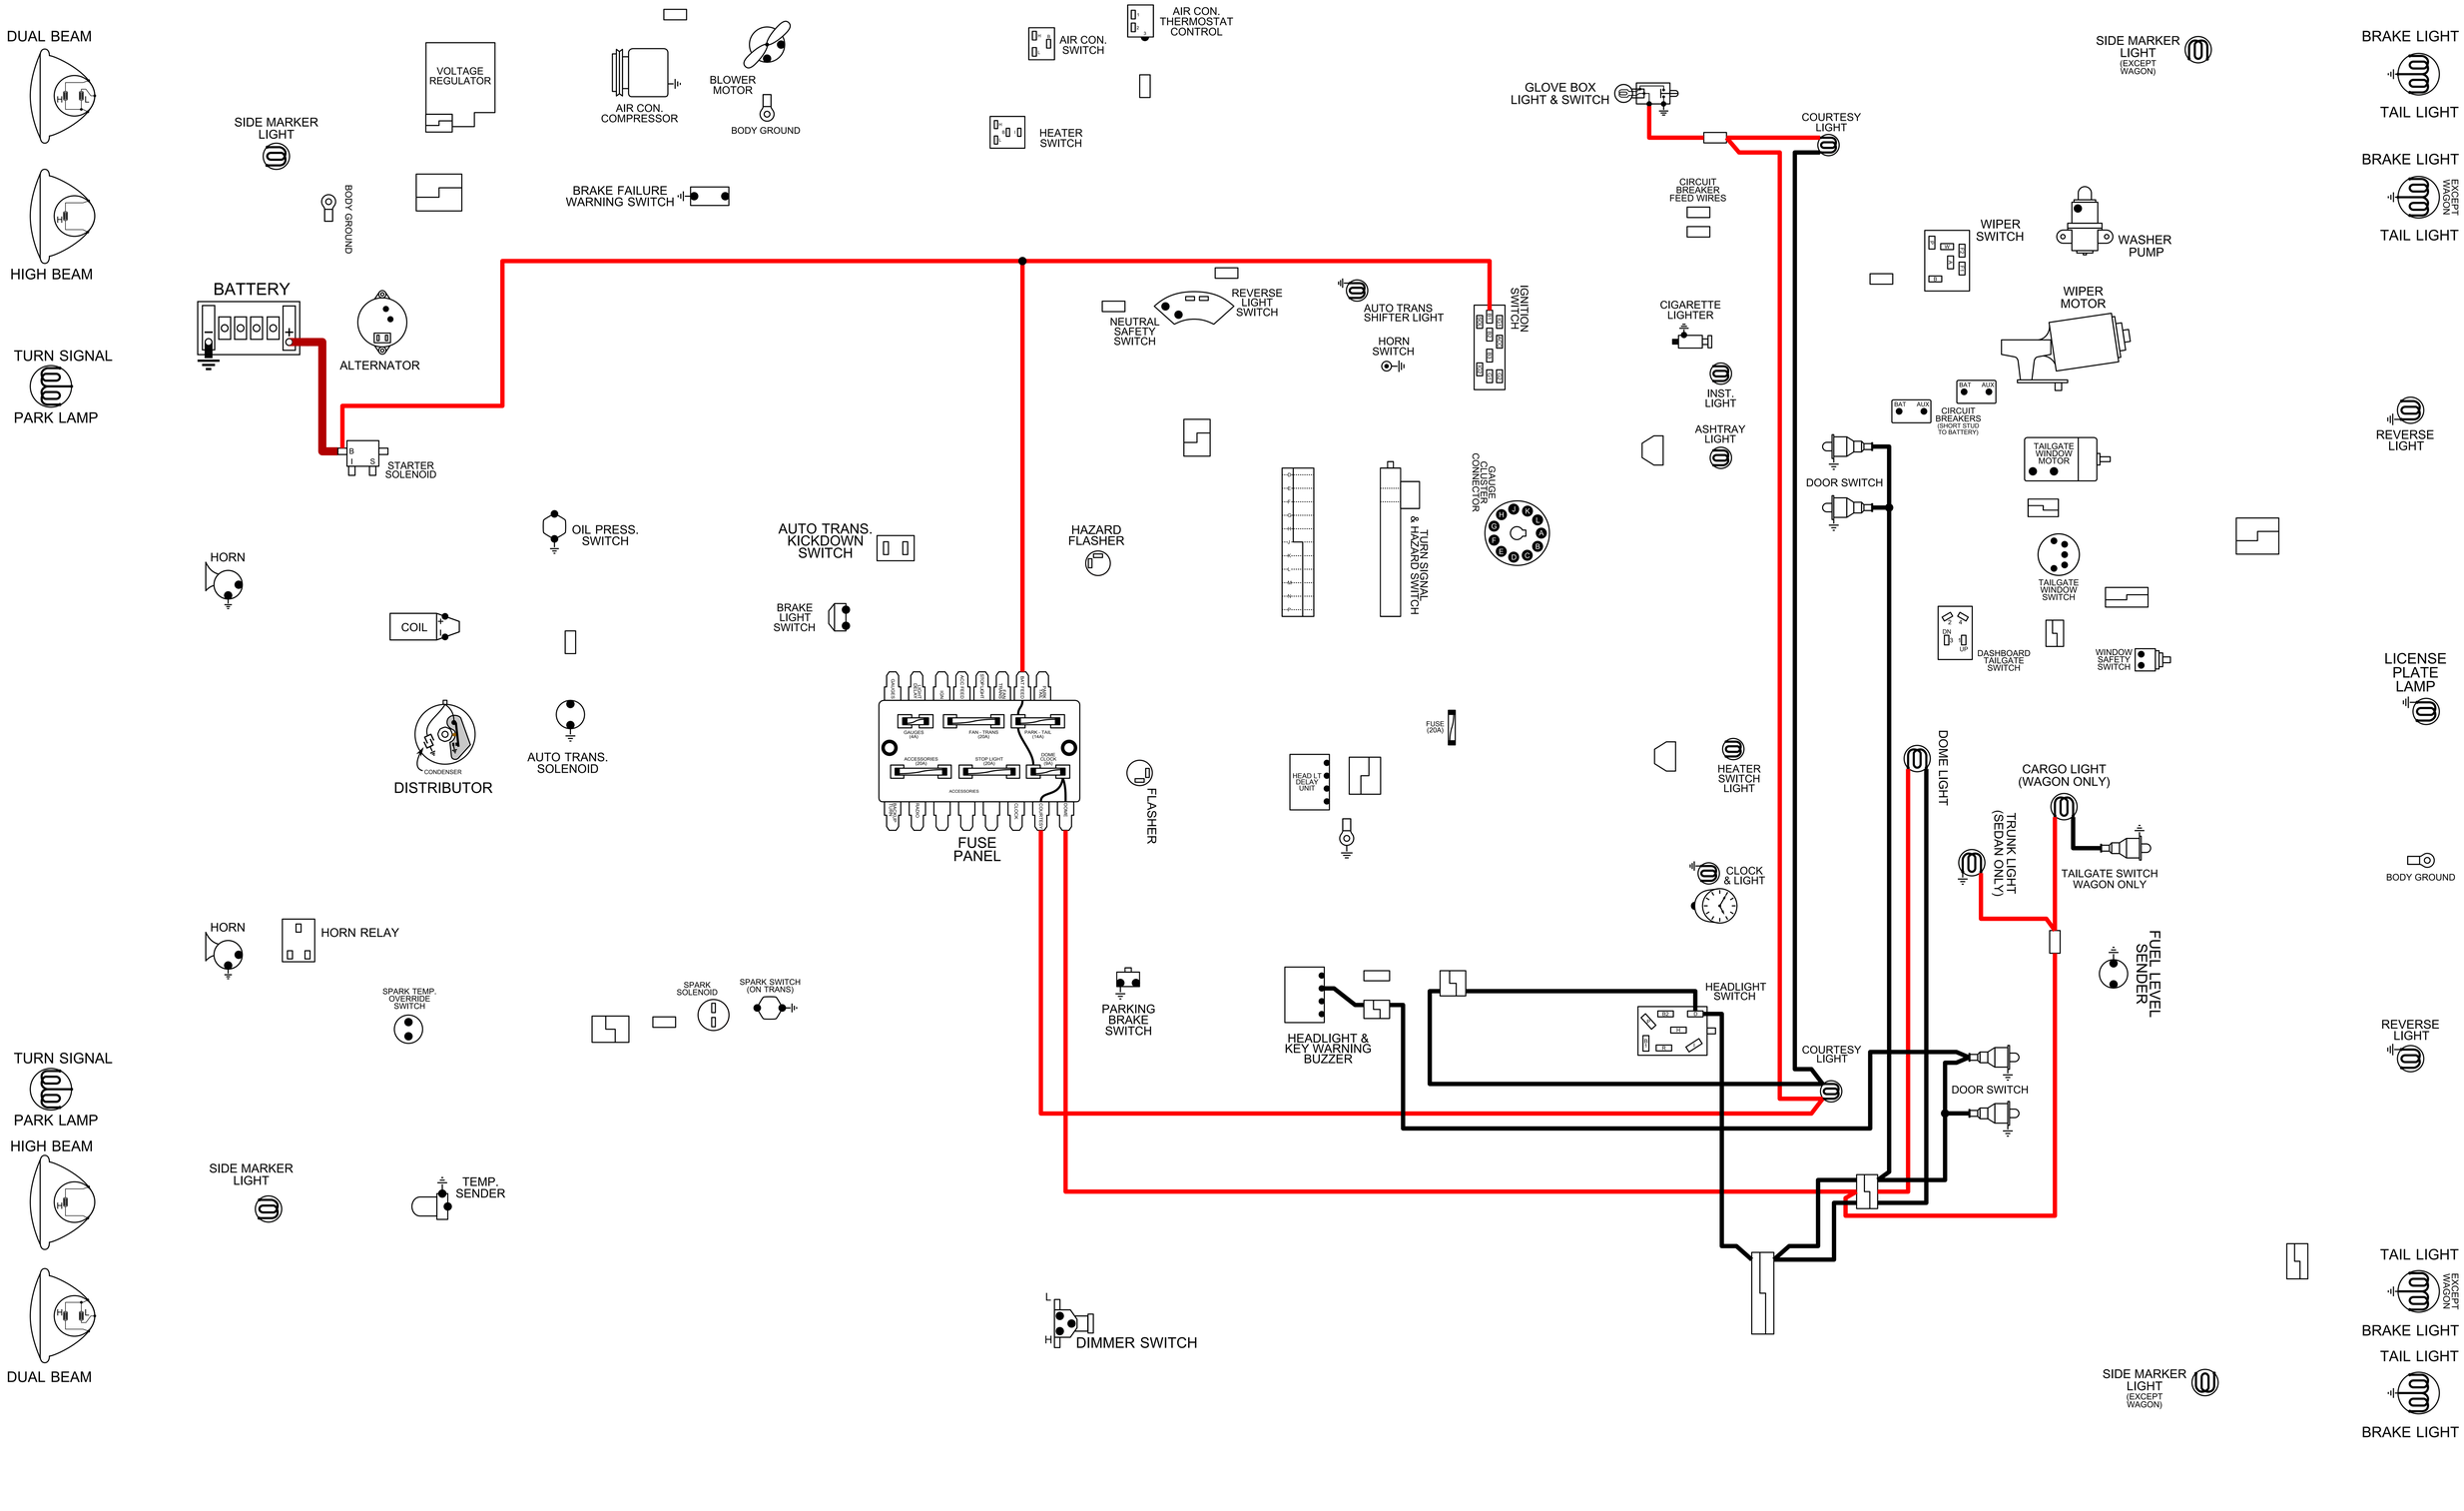

1971 AMC AMBASSADOR
DASHBOARD PRINTED CIRCUIT BOARD

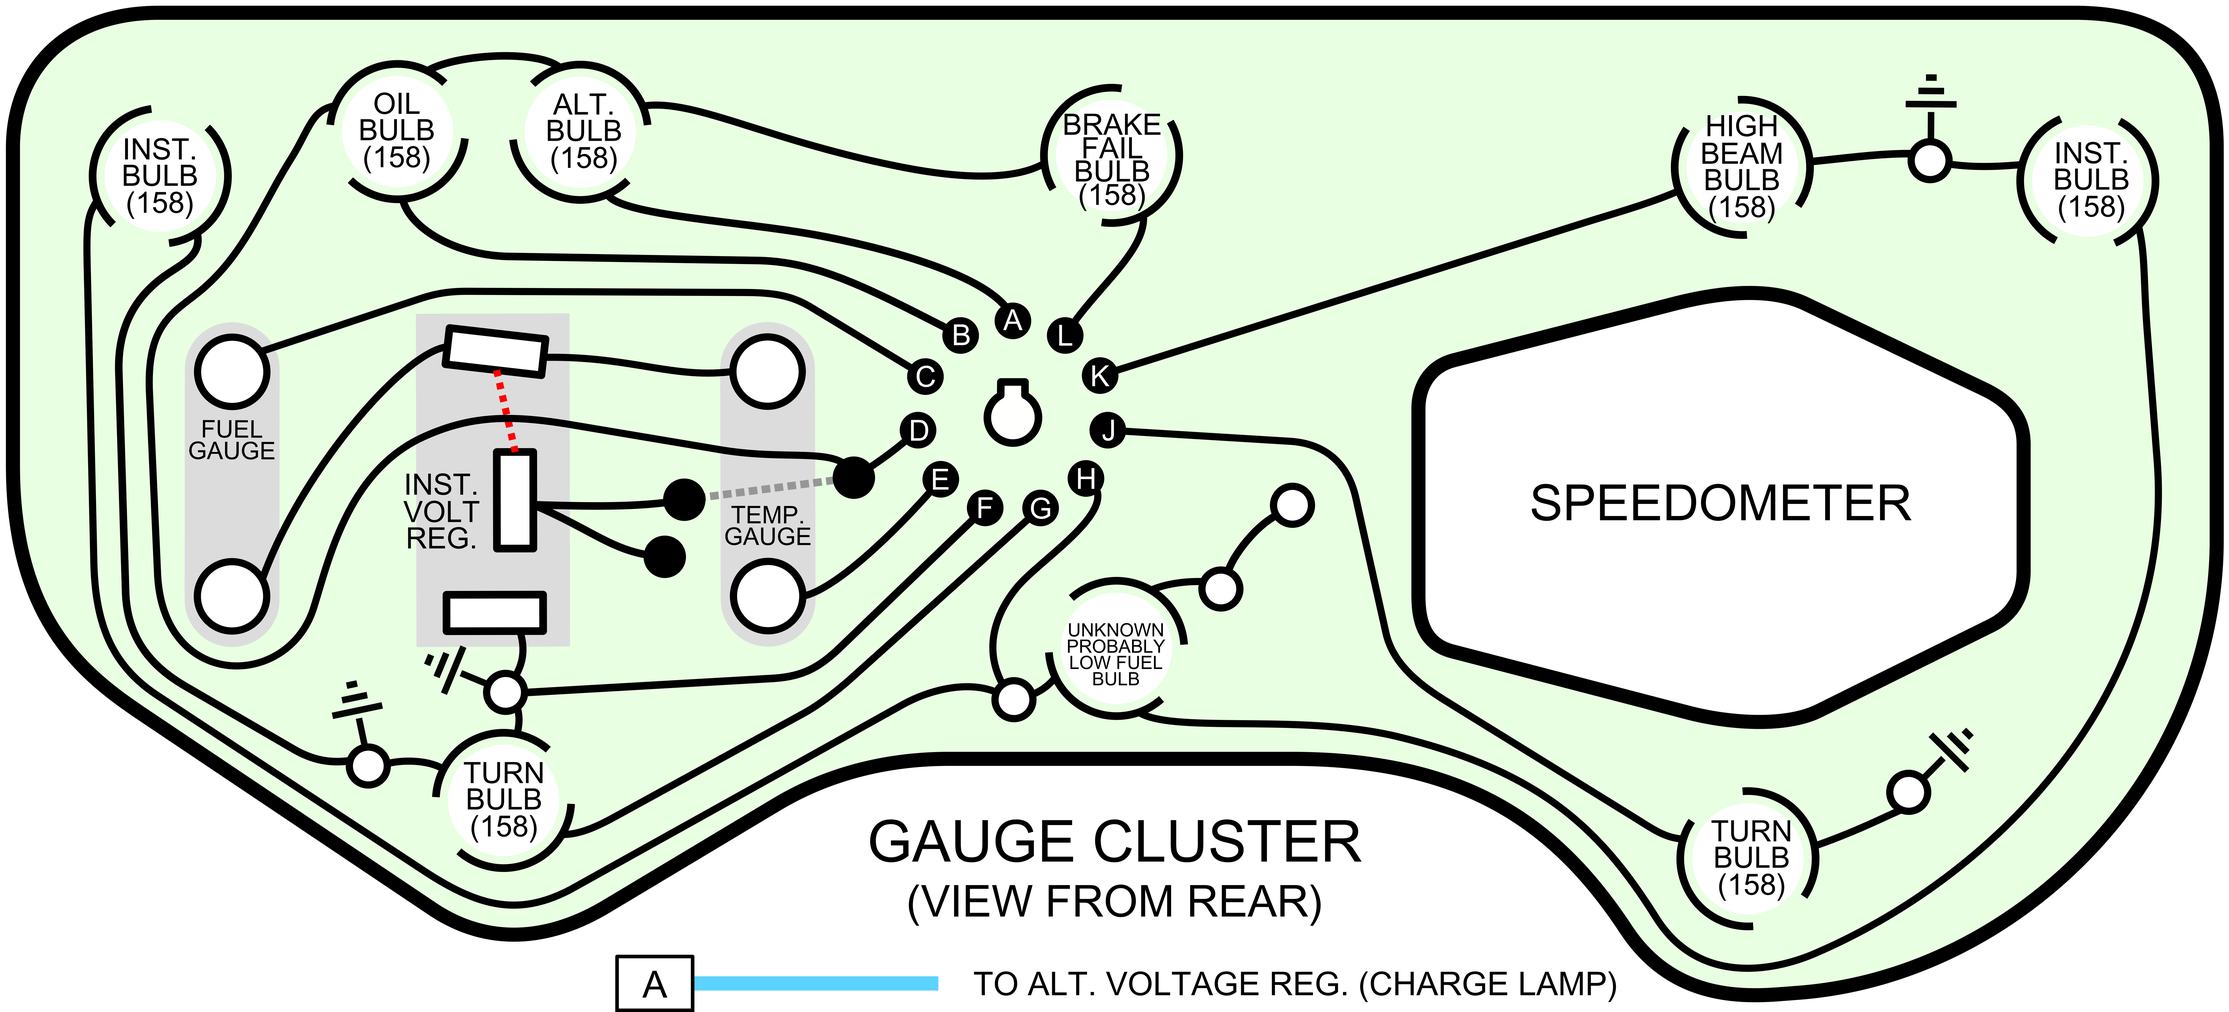

GAUGE CLUSTER
(VIEW FROM REAR)

A	TO ALT. VOLTAGE REG. (CHARGE LAMP)
B	TO OIL PRESS. SWITCH
C	TO FUEL SENDER
D	TO FUSEBOX (POWER FEED)
E	TO TEMP. SENDER
F	UNUSED (GROUND)
G	TO TURN SIG. SWITCH (RIGHT)
H	TO HEADLIGHT SWITCH (INST. LIGHTS)
J	TO TURN SIG. SWITCH (LEFT)
K	TO DIMMER SWITCH (HIGH BEAM IND.)
L	TO BRAKE FAILURE SWITCH

CINCO